





SECTION 10

WIRING DIAGRAMS AND SCHEMATICS

WIRING DIAGRAM MODEL: 601R-2

⚠ WARNING

-This wiring information is provided for use by qualified service personnel only.
-Disconnect appliance from electrical supply before beginning service.
-Be sure all grounding devices are connected when service is complete.
-Failure to observe the above warnings may result in severe electrical shock.

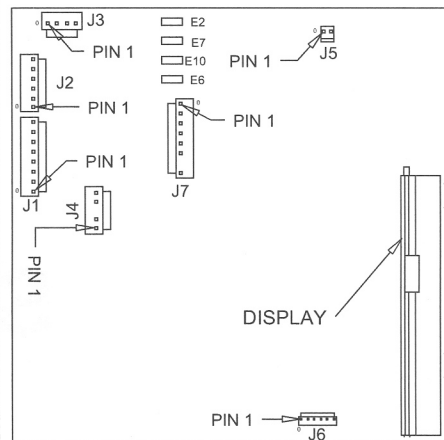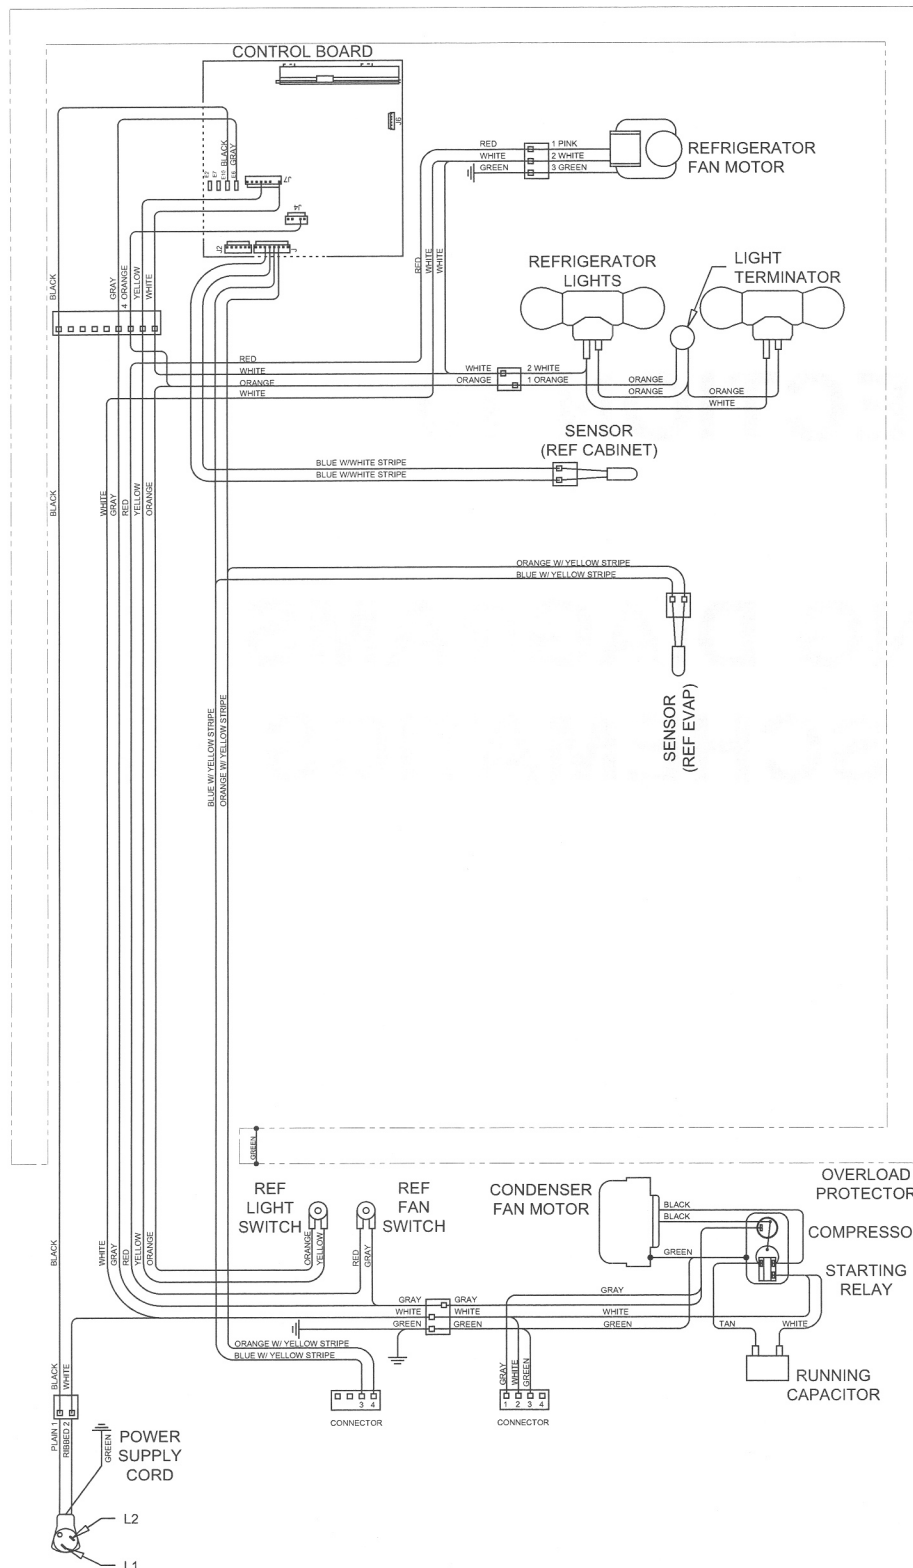

CONTROL BOARD DETAIL

CIRCUIT		DESCRIPTION	FUNCTION	COLOR
120 VOLT CORD				
E1	REF LTR	NOT USED		BLACK
E2	FCOMP	NOT USED		GRAY
E3	L1	POWER INTO BOARD	POWERS REF COMPRESSOR AND CONDENSER FAN	
E4	RCOMP	REF COMPRESSOR		
E5	C FAN	NOT USED		
E6	E FAN	NOT USED		
E7	LITES	NOT USED		
E8	LITES	NOT USED		
E9	LITES	NOT USED		
E10	LITES	NOT USED		
E11	LITES	NOT USED		
E12	LITES	NOT USED		
E13	LITES	NOT USED		
E14	LITES	NOT USED		
E15	LITES	NOT USED		
E16	LITES	NOT USED		
E17	LITES	NOT USED		
E18	LITES	NOT USED		
E19	LITES	NOT USED		
E20	LITES	NOT USED		
E21	LITES	NOT USED		
E22	LITES	NOT USED		
E23	LITES	NOT USED		
E24	LITES	NOT USED		
E25	LITES	NOT USED		
E26	LITES	NOT USED		
E27	LITES	NOT USED		
E28	LITES	NOT USED		
E29	LITES	NOT USED		
E30	LITES	NOT USED		
E31	LITES	NOT USED		
E32	LITES	NOT USED		
E33	LITES	NOT USED		
E34	LITES	NOT USED		
E35	LITES	NOT USED		
E36	LITES	NOT USED		
E37	LITES	NOT USED		
E38	LITES	NOT USED		
E39	LITES	NOT USED		
E40	LITES	NOT USED		
E41	LITES	NOT USED		
E42	LITES	NOT USED		
E43	LITES	NOT USED		
E44	LITES	NOT USED		
E45	LITES	NOT USED		
E46	LITES	NOT USED		
E47	LITES	NOT USED		
E48	LITES	NOT USED		
E49	LITES	NOT USED		
E50	LITES	NOT USED		
E51	LITES	NOT USED		
E52	LITES	NOT USED		
E53	LITES	NOT USED		
E54	LITES	NOT USED		
E55	LITES	NOT USED		
E56	LITES	NOT USED		
E57	LITES	NOT USED		
E58	LITES	NOT USED		
E59	LITES	NOT USED		
E60	LITES	NOT USED		
E61	LITES	NOT USED		
E62	LITES	NOT USED		
E63	LITES	NOT USED		
E64	LITES	NOT USED		
E65	LITES	NOT USED		
E66	LITES	NOT USED		
E67	LITES	NOT USED		
E68	LITES	NOT USED		
E69	LITES	NOT USED		
E70	LITES	NOT USED		
E71	LITES	NOT USED		
E72	LITES	NOT USED		
E73	LITES	NOT USED		
E74	LITES	NOT USED		
E75	LITES	NOT USED		
E76	LITES	NOT USED		
E77	LITES	NOT USED		
E78	LITES	NOT USED		
E79	LITES	NOT USED		
E80	LITES	NOT USED		
E81	LITES	NOT USED		
E82	LITES	NOT USED		
E83	LITES	NOT USED		
E84	LITES	NOT USED		
E85	LITES	NOT USED		
E86	LITES	NOT USED		
E87	LITES	NOT USED		
E88	LITES	NOT USED		
E89	LITES	NOT USED		
E90	LITES	NOT USED		
E91	LITES	NOT USED		
E92	LITES	NOT USED		
E93	LITES	NOT USED		
E94	LITES	NOT USED		
E95	LITES	NOT USED		
E96	LITES	NOT USED		
E97	LITES	NOT USED		
E98	LITES	NOT USED		
E99	LITES	NOT USED		
E100	LITES	NOT USED		
LOW VOLTAGE THERMISTOR CIRCUITS				
J1-1		NOT USED		
J1-2		NOT USED		
J1-3		NOT USED		
J1-4		NOT USED		
J1-5		NOT USED		
J1-6		NOT USED		
J1-7		NOT USED		
J1-8		NOT USED		
J1-9		NOT USED		
J1-10		NOT USED		
J1-11		NOT USED		
J1-12		NOT USED		
J1-13		NOT USED		
J1-14		NOT USED		
J1-15		NOT USED		
J1-16		NOT USED		
J1-17		NOT USED		
J1-18		NOT USED		


WIRING SCHEMATIC

MODEL: 601R-2

⚠ WARNING

-This wiring information is provided for use by qualified service personnel only.
 -Disconnect appliance from electrical supply before beginning service.
 -Be sure all grounding devices are connected when service is complete.
 -Failure to observe the above warnings may result in severe electrical shock.

HIGH VOLTAGE WIRING SCHEMATIC

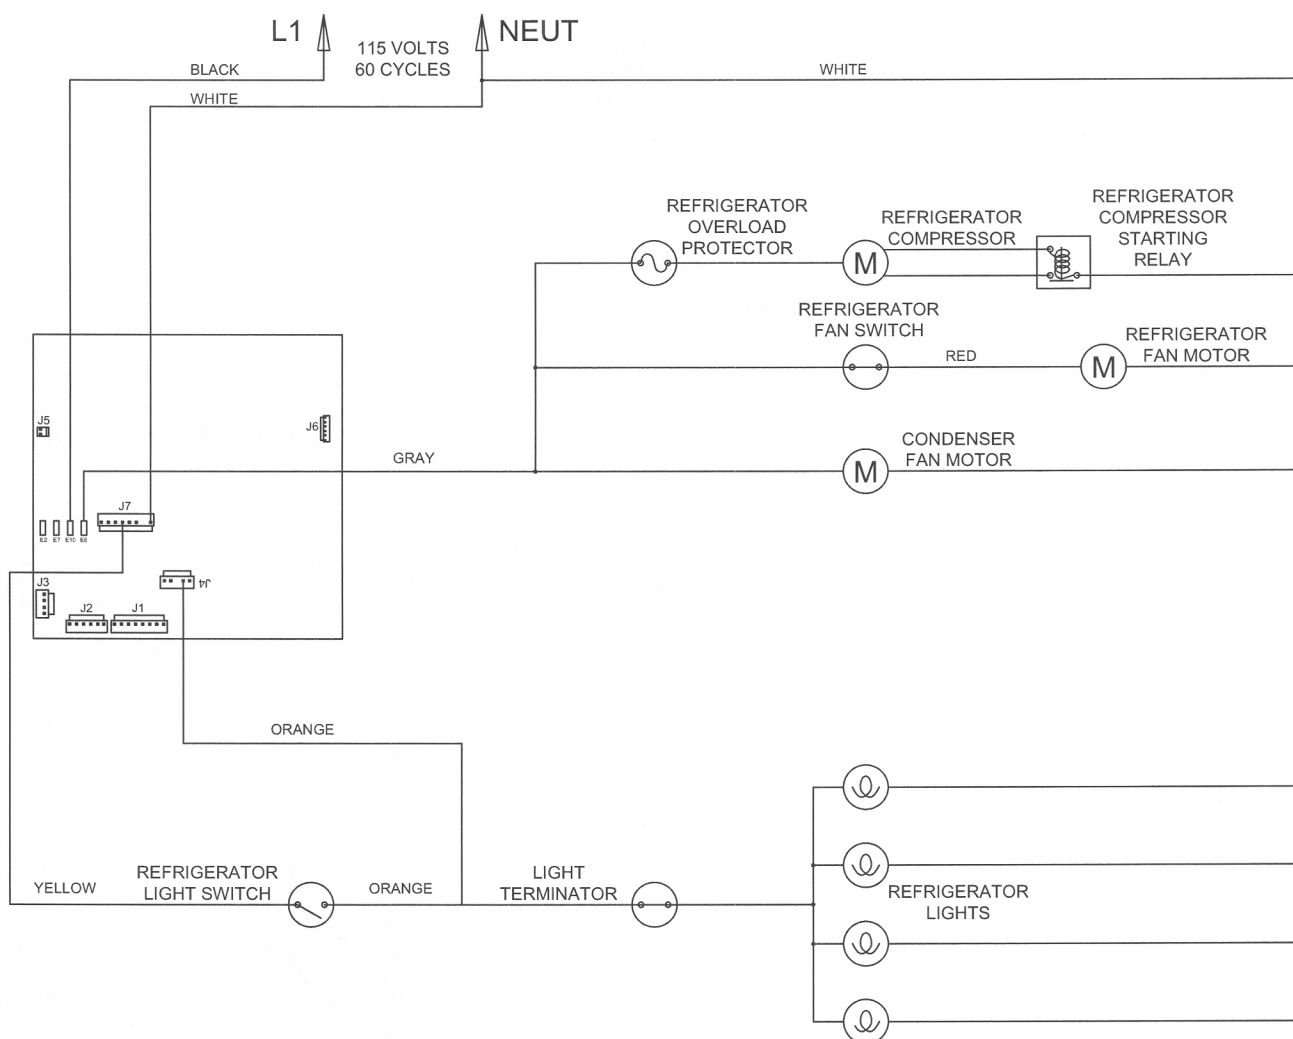



PART NUMBER 3756711

WIRING DIAGRAM

MODEL 601RG-2

WARNING

-This wiring information is provided for use by qualified service personnel only.
 -Disconnect appliance from electrical supply before beginning service.
 -Be sure all grounding devices are connected when service is complete.
 -Failure to observe the above warnings may result in severe electrical shock.

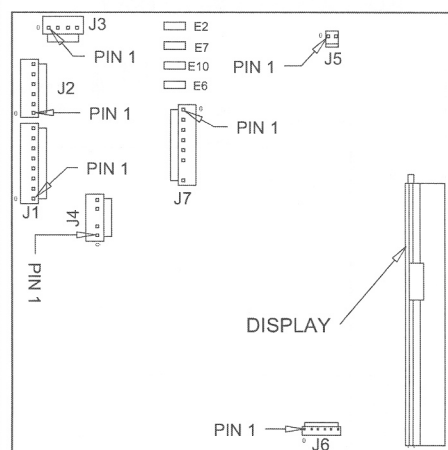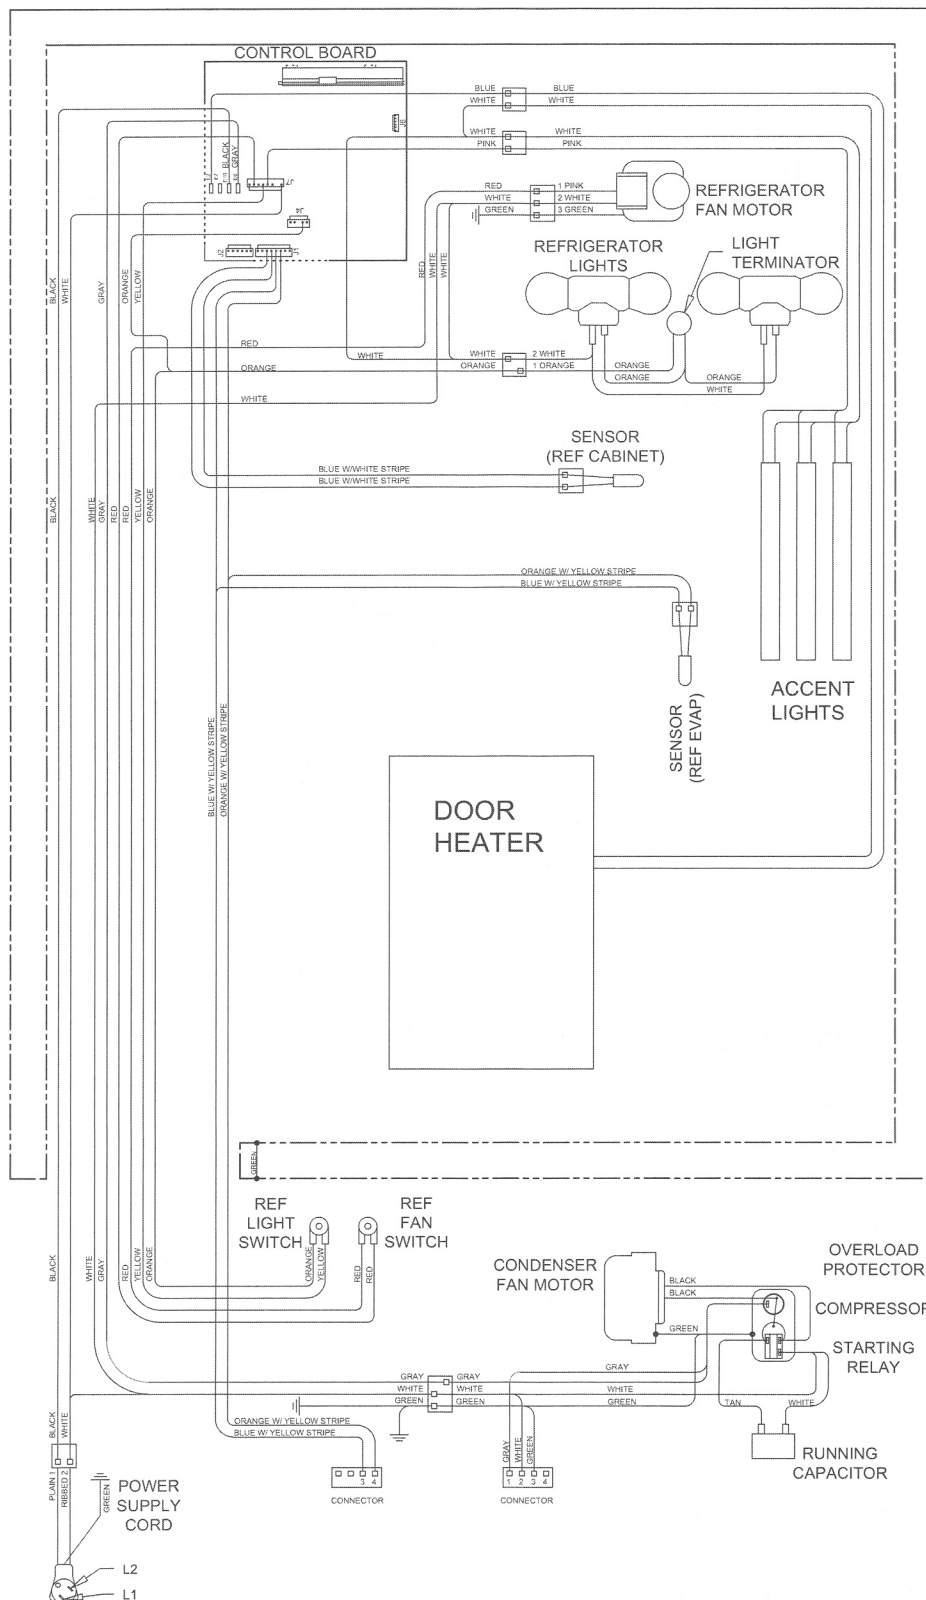

CONTROL BOARD DETAIL

CONTROL BOARD SUMMARY

CONTROL BOARD SUMMARY			
CIRCUIT	DESCRIPTION	FUNCTION	COLOR
120 VOLT CIRCUITS			
E2	DOOR HEATER	POWERS DOOR HEATER	BLUE
E7	F COMP	NOT USED	
E10	POWER IN	POWER INTO BOARD	BLACK
E6	REF COMPRESSOR	POWERS REF COMPRESSOR AND CONDENSER FAN	GRAY
J7-1	C FAN	NOT USED	
J7-2	E FAN	POWERS REF EVAP FAN	RED
J7-3		NOT USED	
J7-4	LITES	POWERS LIGHTS	YELLOW
J7-5	ICE	ACCENT LIGHTS	PINK
J7-6		NOT USED	
J7-7		NOT USED(NO PIN)	
J7-8	NEU	NEUTRAL INTO BOARD	WHITE
J4-1		NOT USED	
J4-2	REF DOOR LIGHT SENSE	SENSES IF REF DOOR OPEN	ORANGE
J4-3		NOT USED(NO PIN)	
J4-4		NOT USED	
J4-5		NOT USED	
LOW VOLTAGE THERMISTOR CIRCUITS			
J1-1		NOT USED	
J1-2		NOT USED	
J1-3	REF EVAP	SENSES REF EVAP TEMP	ORANGE/YLW
J1-4	REF EVAP	SENSES REF EVAP TEMP	BLUE/YLW
J1-5	REF COMPARTMENT	SENSES REF CABINET TEMP	BLUE/WHITE
J1-6	REF COMPARTMENT	SENSES REF CABINET TEMP	BLUE/WHITE
J1-7		NOT USED	




WIRING SCHEMATIC

MODEL: 601RG-2

WARNING

- This wiring information is provided for use by qualified service personnel only.
- Disconnect appliance from electrical supply before beginning service.
- Be sure all grounding devices are connected when service is complete.
- Failure to observe the above warnings may result in severe electrical shock.

HIGH VOLTAGE WIRING SCHEMATIC


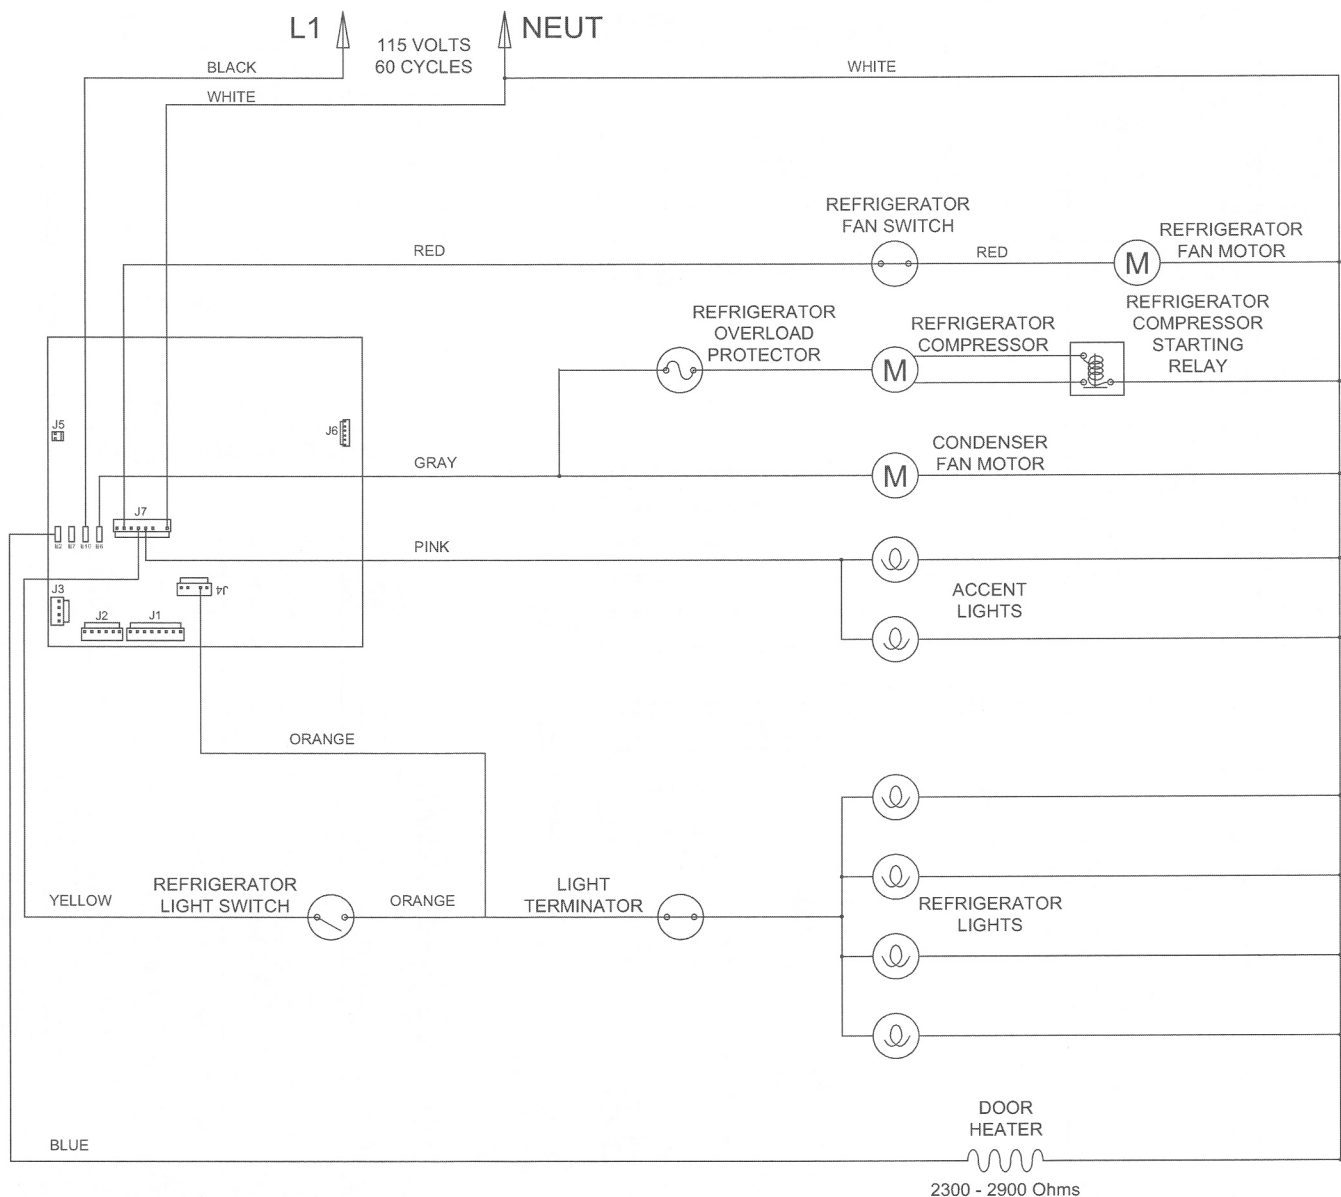


PART NUMBER 3756711

WIRING DIAGRAM MODEL: 601F-2

WARNING

-This wiring information is provided for use by qualified service personnel only.
-Disconnect appliance from electrical supply before beginning service.
-Be sure all grounding devices are connected when service is complete.
-Failure to observe the above warnings may result in severe electrical shock.

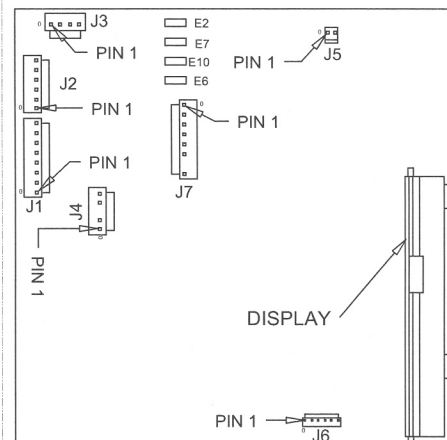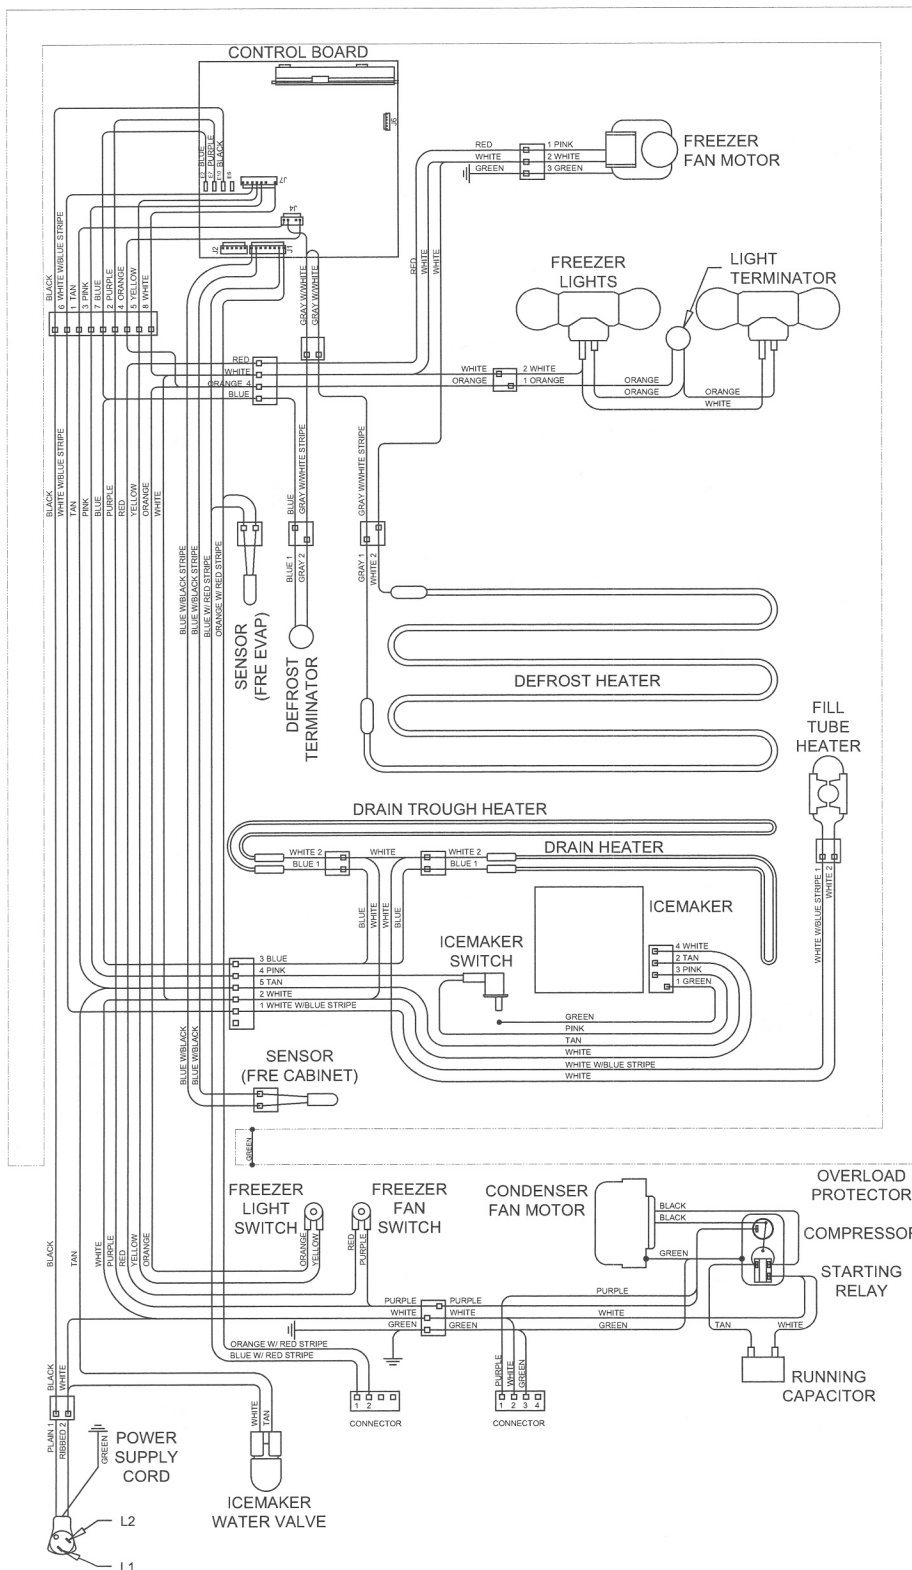

CONTROL BOARD DETAIL

CONTROL BOARD SUMMARY

CIRCUIT	DESCRIPTION	FUNCTION	COLOR
120 VOLT CIRCUITS			
E2	DEFROST HEATER	POWERS DEFROST CIRCUIT	BLUE
E7	FRZ COMPRESSOR	POWERS FRZ COMPRESSOR AND CONDENSER FAN	PURPLE
E10	POWER IN	POWER INTO BOARD	BLACK
E6	ROOM		
J7-1	NOT USED		
J7-2	C FAN		
J7-3	ICE MAKER ACC (FILL TUBE)	POWERS FILL TUBE HEATER AND ACCESSORIES	WHITE/BLUE
J7-4	ICE MAKER	POWERS LIGHTS	YELLOW
J7-5	ICE MAKER	POWERS ICE MAKER	PINK
J7-6	NOT USED		
J7-7	NOT USED (NO PIN)		
J7-8	NEU	NEUTRAL INTO BOARD	WHITE
J4-1	FRZ DOOR LIGHT SENSE	SENSES IF FRZ DOOR OPEN	ORANGE
J4-2	NOT USED		
J4-3	NOT USED (NO PIN)		
J4-4	DEF SENSOR	SENSES WHEN DEF HEATER SHUTS OFF	GRAY/WHITE
J4-5	ICE MAKER VALVE SENSOR	SENSES WATER VALVE ACTIVATION	TAN
LOW VOLTAGE THERMISTOR CIRCUITS			
J1-1	FRZ EVAP	SENSES FRZ EVAP TEMP	ORANGE/RED
J1-2	FRZ EVAP	SENSES FRZ EVAP TEMP	BLUE/RED
J1-3	NOT USED		
J1-4	NOT USED		
J1-5	NOT USED		
J1-6	NOT USED		
J1-7	FRZ COMPARTMENT	SENSES FRZ CABINET TEMP	BLUE/BLACK
J1-8	FRZ COMPARTMENT	SENSES FRZ CABINET TEMP	BLUE/BLACK

PART NUMBER 3756690


WIRING SCHEMATIC

MODEL: 601F-2

⚠ WARNING

-This wiring information is provided for use by qualified service personnel only.
 -Disconnect appliance from electrical supply before beginning service.
 -Be sure all grounding devices are connected when service is complete.
 -Failure to observe the above warnings may result in severe electrical shock.

HIGH VOLTAGE WIRING SCHEMATIC


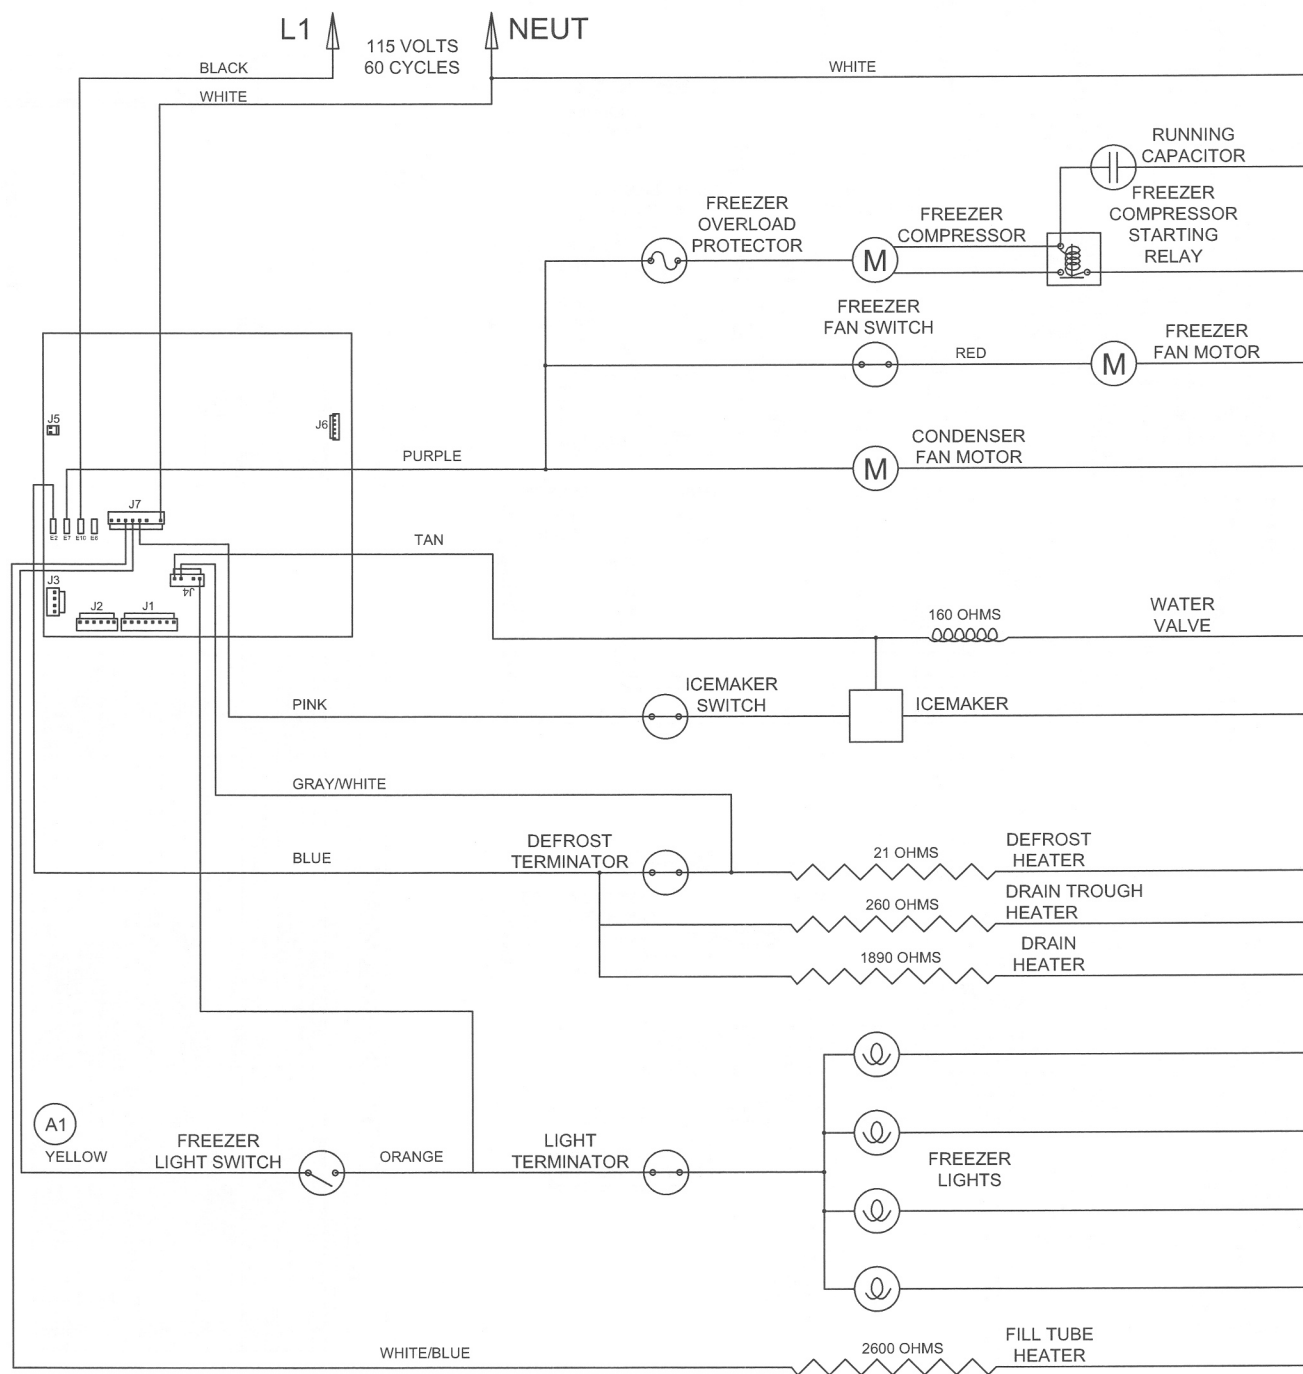


PART NUMBER 3756690

WIRING DIAGRAM MODELS: 611-2 & 650-2

WARNING

-This wiring information is provided for use by qualified service personnel only.
-Disconnect appliance from electrical supply before beginning service.
-Be sure all grounding devices are connected when service is complete.
-Failure to observe the above warnings may result in severe electrical shock.

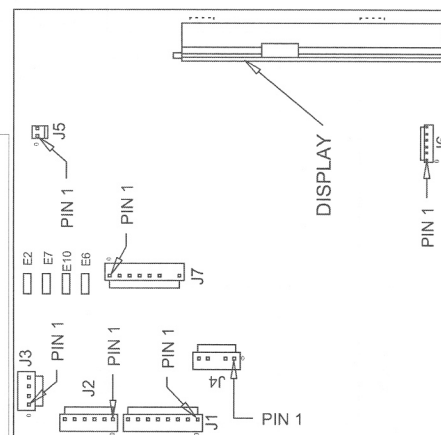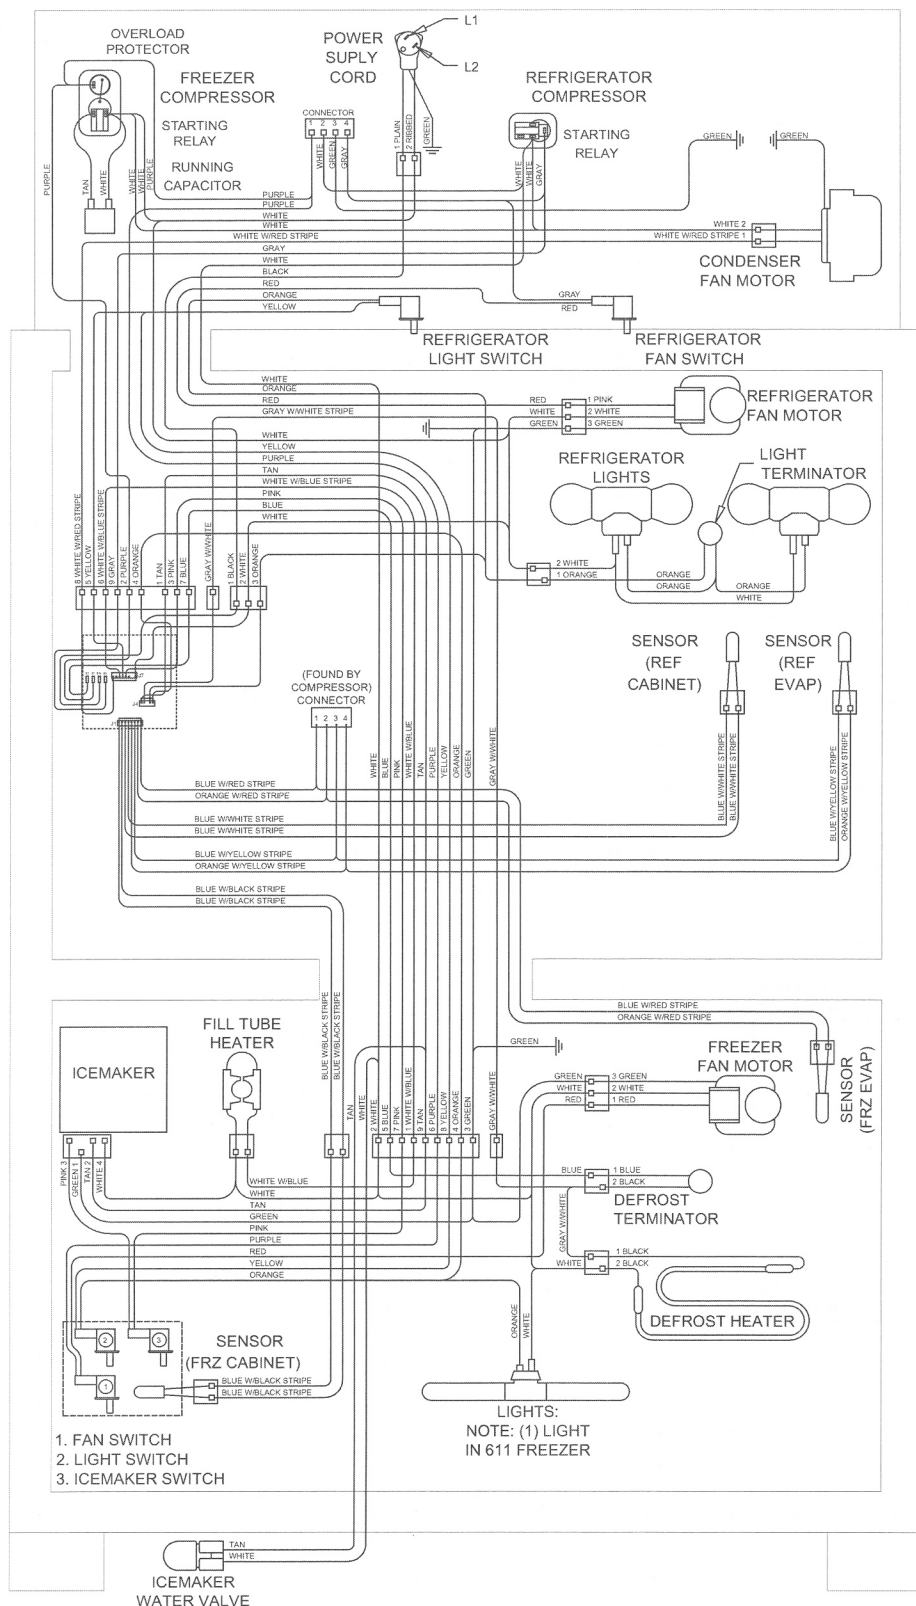

CONTROL BOARD SUMMARY

CIRCUIT	DESCRIPTION	FUNCTION	COLOR
E9	DEF FHR	DEFROST HEATER	BLUE
E10	FCOMP	POWER FZ COMPRESSOR	PURPLE
E11	FCOMP	POWER FZ COMPRESSOR	PURPLE
E12	FCOMP	POWER FZ COMPRESSOR	PURPLE
E13	FCOMP	POWER FZ COMPRESSOR	PURPLE
E14	FCOMP	POWER FZ COMPRESSOR	PURPLE
E15	FCOMP	POWER FZ COMPRESSOR	PURPLE
E16	FCOMP	POWER FZ COMPRESSOR	PURPLE
E17	FCOMP	POWER FZ COMPRESSOR	PURPLE
E18	FCOMP	POWER FZ COMPRESSOR	PURPLE
E19	FCOMP	POWER FZ COMPRESSOR	PURPLE
E20	FCOMP	POWER FZ COMPRESSOR	PURPLE
E21	FCOMP	POWER FZ COMPRESSOR	PURPLE
E22	FCOMP	POWER FZ COMPRESSOR	PURPLE
E23	FCOMP	POWER FZ COMPRESSOR	PURPLE
E24	FCOMP	POWER FZ COMPRESSOR	PURPLE
E25	FCOMP	POWER FZ COMPRESSOR	PURPLE
E26	FCOMP	POWER FZ COMPRESSOR	PURPLE
E27	FCOMP	POWER FZ COMPRESSOR	PURPLE
E28	FCOMP	POWER FZ COMPRESSOR	PURPLE
E29	FCOMP	POWER FZ COMPRESSOR	PURPLE
E30	FCOMP	POWER FZ COMPRESSOR	PURPLE
E31	FCOMP	POWER FZ COMPRESSOR	PURPLE
E32	FCOMP	POWER FZ COMPRESSOR	PURPLE
E33	FCOMP	POWER FZ COMPRESSOR	PURPLE
E34	FCOMP	POWER FZ COMPRESSOR	PURPLE
E35	FCOMP	POWER FZ COMPRESSOR	PURPLE
E36	FCOMP	POWER FZ COMPRESSOR	PURPLE
E37	FCOMP	POWER FZ COMPRESSOR	PURPLE
E38	FCOMP	POWER FZ COMPRESSOR	PURPLE
E39	FCOMP	POWER FZ COMPRESSOR	PURPLE
E40	FCOMP	POWER FZ COMPRESSOR	PURPLE
E41	FCOMP	POWER FZ COMPRESSOR	PURPLE
E42	FCOMP	POWER FZ COMPRESSOR	PURPLE
E43	FCOMP	POWER FZ COMPRESSOR	PURPLE
E44	FCOMP	POWER FZ COMPRESSOR	PURPLE
E45	FCOMP	POWER FZ COMPRESSOR	PURPLE
E46	FCOMP	POWER FZ COMPRESSOR	PURPLE
E47	FCOMP	POWER FZ COMPRESSOR	PURPLE
E48	FCOMP	POWER FZ COMPRESSOR	PURPLE
E49	FCOMP	POWER FZ COMPRESSOR	PURPLE
E50	FCOMP	POWER FZ COMPRESSOR	PURPLE
E51	FCOMP	POWER FZ COMPRESSOR	PURPLE
E52	FCOMP	POWER FZ COMPRESSOR	PURPLE
E53	FCOMP	POWER FZ COMPRESSOR	PURPLE
E54	FCOMP	POWER FZ COMPRESSOR	PURPLE
E55	FCOMP	POWER FZ COMPRESSOR	PURPLE
E56	FCOMP	POWER FZ COMPRESSOR	PURPLE
E57	FCOMP	POWER FZ COMPRESSOR	PURPLE
E58	FCOMP	POWER FZ COMPRESSOR	PURPLE
E59	FCOMP	POWER FZ COMPRESSOR	PURPLE
E60	FCOMP	POWER FZ COMPRESSOR	PURPLE
E61	FCOMP	POWER FZ COMPRESSOR	PURPLE
E62	FCOMP	POWER FZ COMPRESSOR	PURPLE
E63	FCOMP	POWER FZ COMPRESSOR	PURPLE
E64	FCOMP	POWER FZ COMPRESSOR	PURPLE
E65	FCOMP	POWER FZ COMPRESSOR	PURPLE
E66	FCOMP	POWER FZ COMPRESSOR	PURPLE
E67	FCOMP	POWER FZ COMPRESSOR	PURPLE
E68	FCOMP	POWER FZ COMPRESSOR	PURPLE
E69	FCOMP	POWER FZ COMPRESSOR	PURPLE
E70	FCOMP	POWER FZ COMPRESSOR	PURPLE
E71	FCOMP	POWER FZ COMPRESSOR	PURPLE
E72	FCOMP	POWER FZ COMPRESSOR	PURPLE
E73	FCOMP	POWER FZ COMPRESSOR	PURPLE
E74	FCOMP	POWER FZ COMPRESSOR	PURPLE
E75	FCOMP	POWER FZ COMPRESSOR	PURPLE
E76	FCOMP	POWER FZ COMPRESSOR	PURPLE
E77	FCOMP	POWER FZ COMPRESSOR	PURPLE
E78	FCOMP	POWER FZ COMPRESSOR	PURPLE
E79	FCOMP	POWER FZ COMPRESSOR	PURPLE
E80	FCOMP	POWER FZ COMPRESSOR	PURPLE
E81	FCOMP	POWER FZ COMPRESSOR	PURPLE
E82	FCOMP	POWER FZ COMPRESSOR	PURPLE
E83	FCOMP	POWER FZ COMPRESSOR	PURPLE
E84	FCOMP	POWER FZ COMPRESSOR	PURPLE
E85	FCOMP	POWER FZ COMPRESSOR	PURPLE
E86	FCOMP	POWER FZ COMPRESSOR	PURPLE
E87	FCOMP	POWER FZ COMPRESSOR	PURPLE
E88	FCOMP	POWER FZ COMPRESSOR	PURPLE
E89	FCOMP	POWER FZ COMPRESSOR	PURPLE
E90	FCOMP	POWER FZ COMPRESSOR	PURPLE
E91	FCOMP	POWER FZ COMPRESSOR	PURPLE
E92	FCOMP	POWER FZ COMPRESSOR	PURPLE
E93	FCOMP	POWER FZ COMPRESSOR	PURPLE
E94	FCOMP	POWER FZ COMPRESSOR	PURPLE
E95	FCOMP	POWER FZ COMPRESSOR	PURPLE
E96	FCOMP	POWER FZ COMPRESSOR	PURPLE
E97	FCOMP	POWER FZ COMPRESSOR	PURPLE
E98	FCOMP	POWER FZ COMPRESSOR	PURPLE
E99	FCOMP	POWER FZ COMPRESSOR	PURPLE
E100	FCOMP	POWER FZ COMPRESSOR	PURPLE




WIRING SCHEMATIC

MODELS: 611-2 & 650-2

⚠ WARNING



-This wiring information is provided for use by qualified service personnel only.
-Disconnect appliance from electrical supply before beginning service.
-Be sure all grounding devices are connected when service is complete.
-Failure to observe the above warnings may result in severe electrical shock.

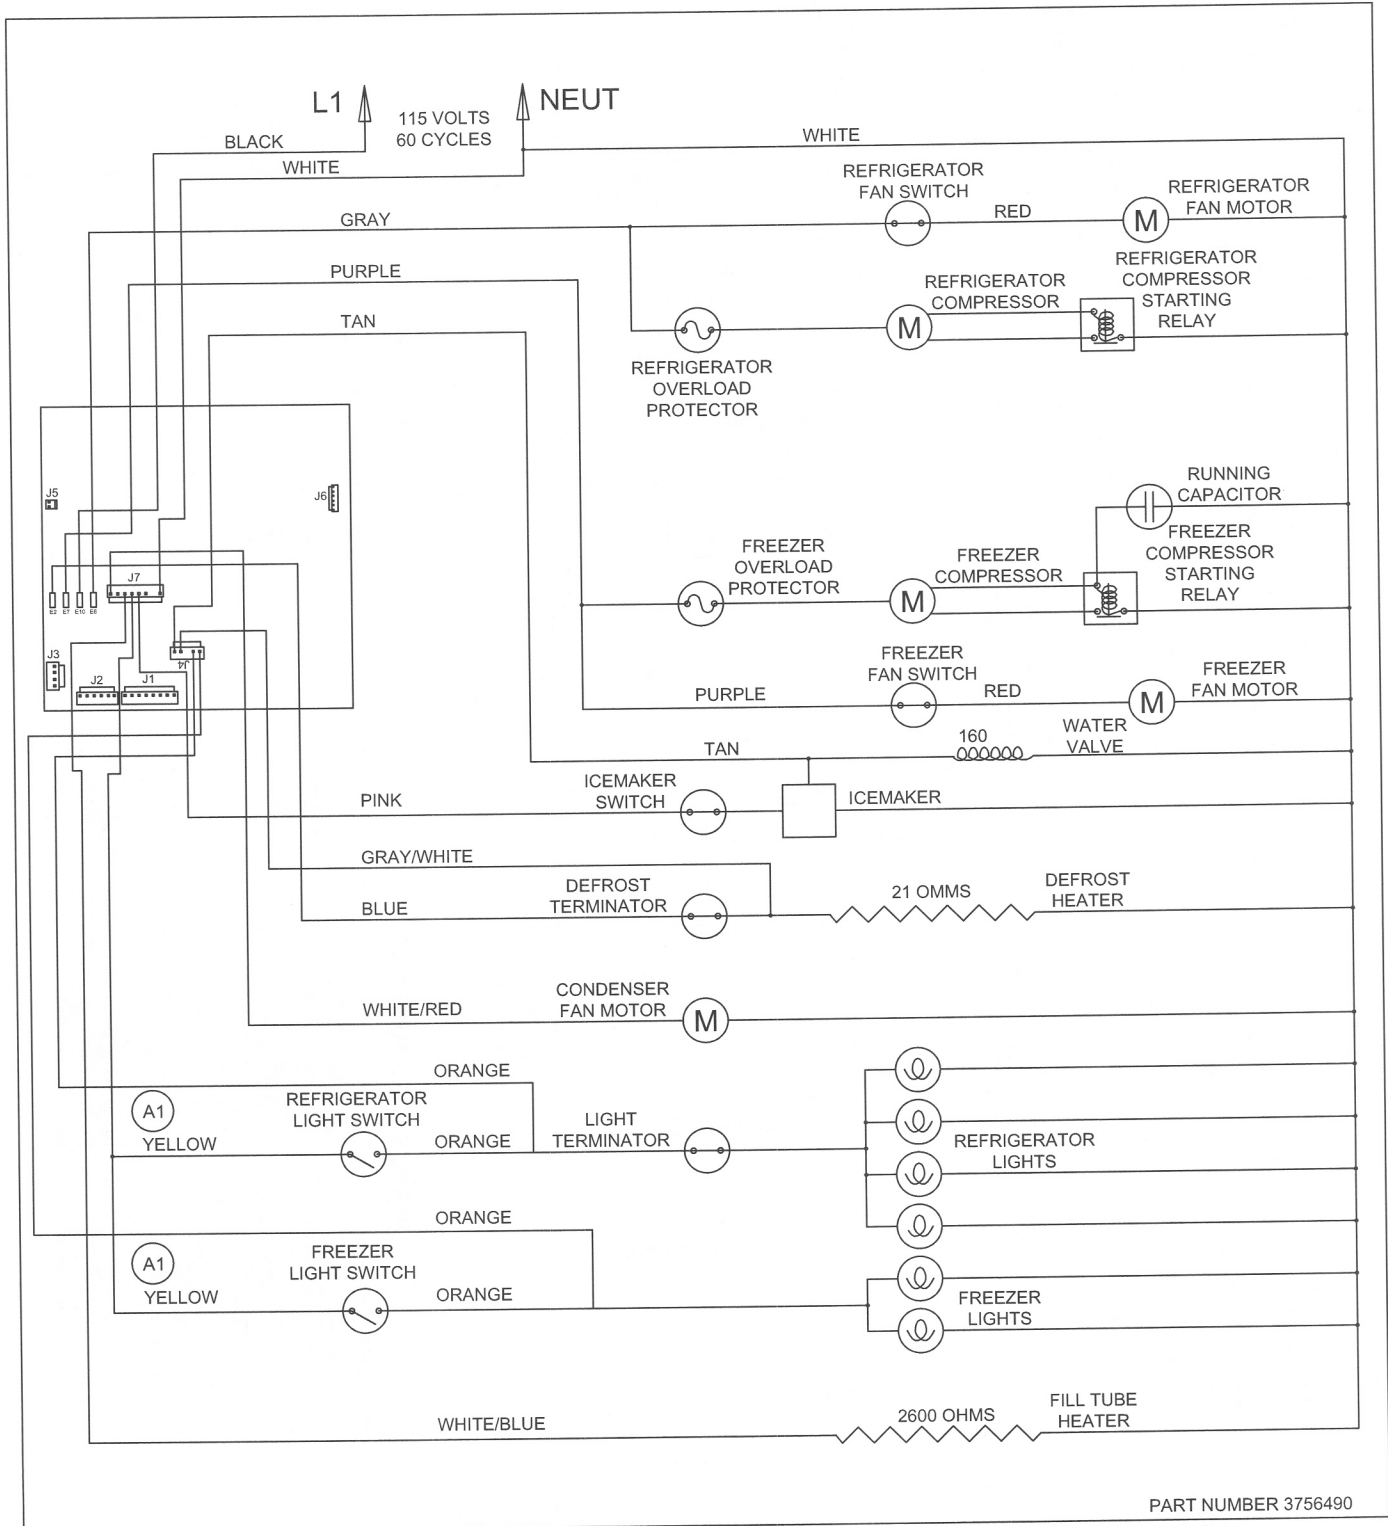

WIRING DIAGRAM MODELS 611G-2 & 650G-2

WARNING

-This wiring information is provided for use by qualified service personnel only.
-Disconnect appliance from electrical supply before beginning service.
-Be sure all grounding devices are connected when service is complete.
-Failure to observe the above warnings may result in severe electrical shock.

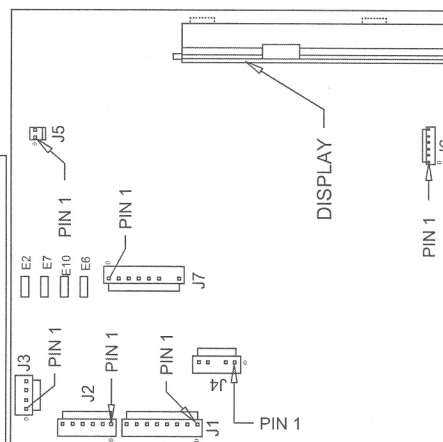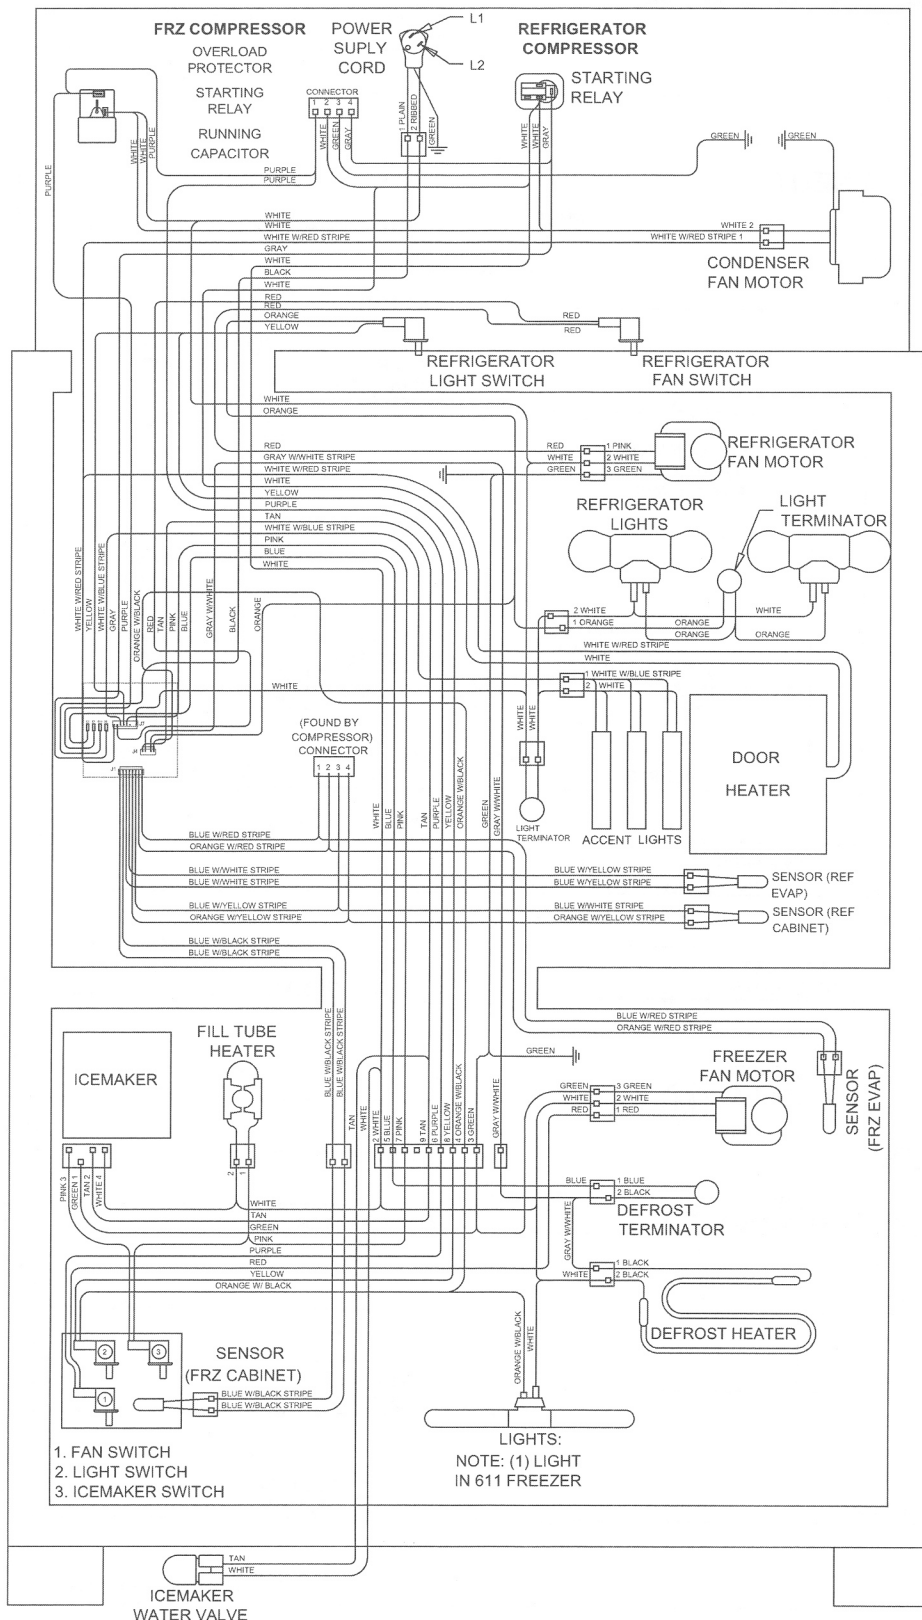


CIRCUIT	DESCRIPTION	FUNCTION	COLOR
E2	DEFROST HEATER	POWERS DEFROST CIRCUIT	BLUE
E7	FRZ COMPRESSOR	POWERS FRZ COMPRESSOR	PURPLE
E8	REF COMPRESSOR	POWERS REF COMPRESSOR	BLACK
E9	COND FAN & DOOR HEATER	POWERS CONDENSER FAN AND DOOR HEATER	WHITE/RED
J7-1	C FAN	POWERS CONDENSER FAN	WHITE/RED
J7-2	E FAN	POWERS REF EVAP FAN	RED
J7-3	REF LIGHTS	POWERS REFRIGERATOR LIGHTS	WHITE/BLUE
J7-4	ACCENT LIGHTS	POWERS REFRIGERATOR ACCENT LIGHTS	WHITE/BLUE
J7-5	ICE MAKER FILL TUBE HTR	POWERS ICE MAKER AND FILL TUBE HEATER	PINK
J7-6	NOT USED (NO PIN)		
J7-8	NEUTRAL INTO BOARD	NEUTRAL INTO BOARD	WHITE
J8-1	FRZ DOOR LIGHT SENSE	SENSES IF FRZ DOOR OPEN	WHITE
J8-2	REF DOOR LIGHT SENSE	SENSES IF REF DOOR OPEN	ORANGE
J8-3	DEF SENSE	SENSES WHEN DEF HEATER SHUTS OFF	ORANGE
J8-4	ICE SENSE	SENSES WATER VALVE ACTIVATION	GRAY/WHITE
J8-5	ICE SENSE	SENSES WATER VALVE ACTIVATION	TAN
J1-1	FRZ EVAP	SENSES FRZ EVAP TEMP	ORANGE/RED
J1-2	REF EVAP	SENSES REF EVAP TEMP	BLUE/RED
J1-3	REF EVAP	SENSES REF EVAP TEMP	ORANGE/YELLOW
J1-4	REF EVAP	SENSES REF EVAP TEMP	BLUE/YELLOW
J1-5	REF EVAP	SENSES REF EVAP TEMP	BLUE/YELLOW
J1-6	REF EVAP	SENSES REF EVAP TEMP	BLUE/YELLOW
J1-7	FRZ COMPARTMENT	SENSES FRZ COMPARTMENT TEMP	BLUE/WHITE
J1-8	FRZ COMPARTMENT	SENSES FRZ COMPARTMENT TEMP	BLUE/BLACK

WIRING SCHEMATIC MODELS 611G-2 & 650G-2

WARNING

-This wiring information is provided for use by qualified service personnel only.
-Disconnect appliance from electrical supply before beginning service.
-Be sure all grounding devices are connected when service is complete.
-Failure to observe the above warnings may result in severe electrical shock.

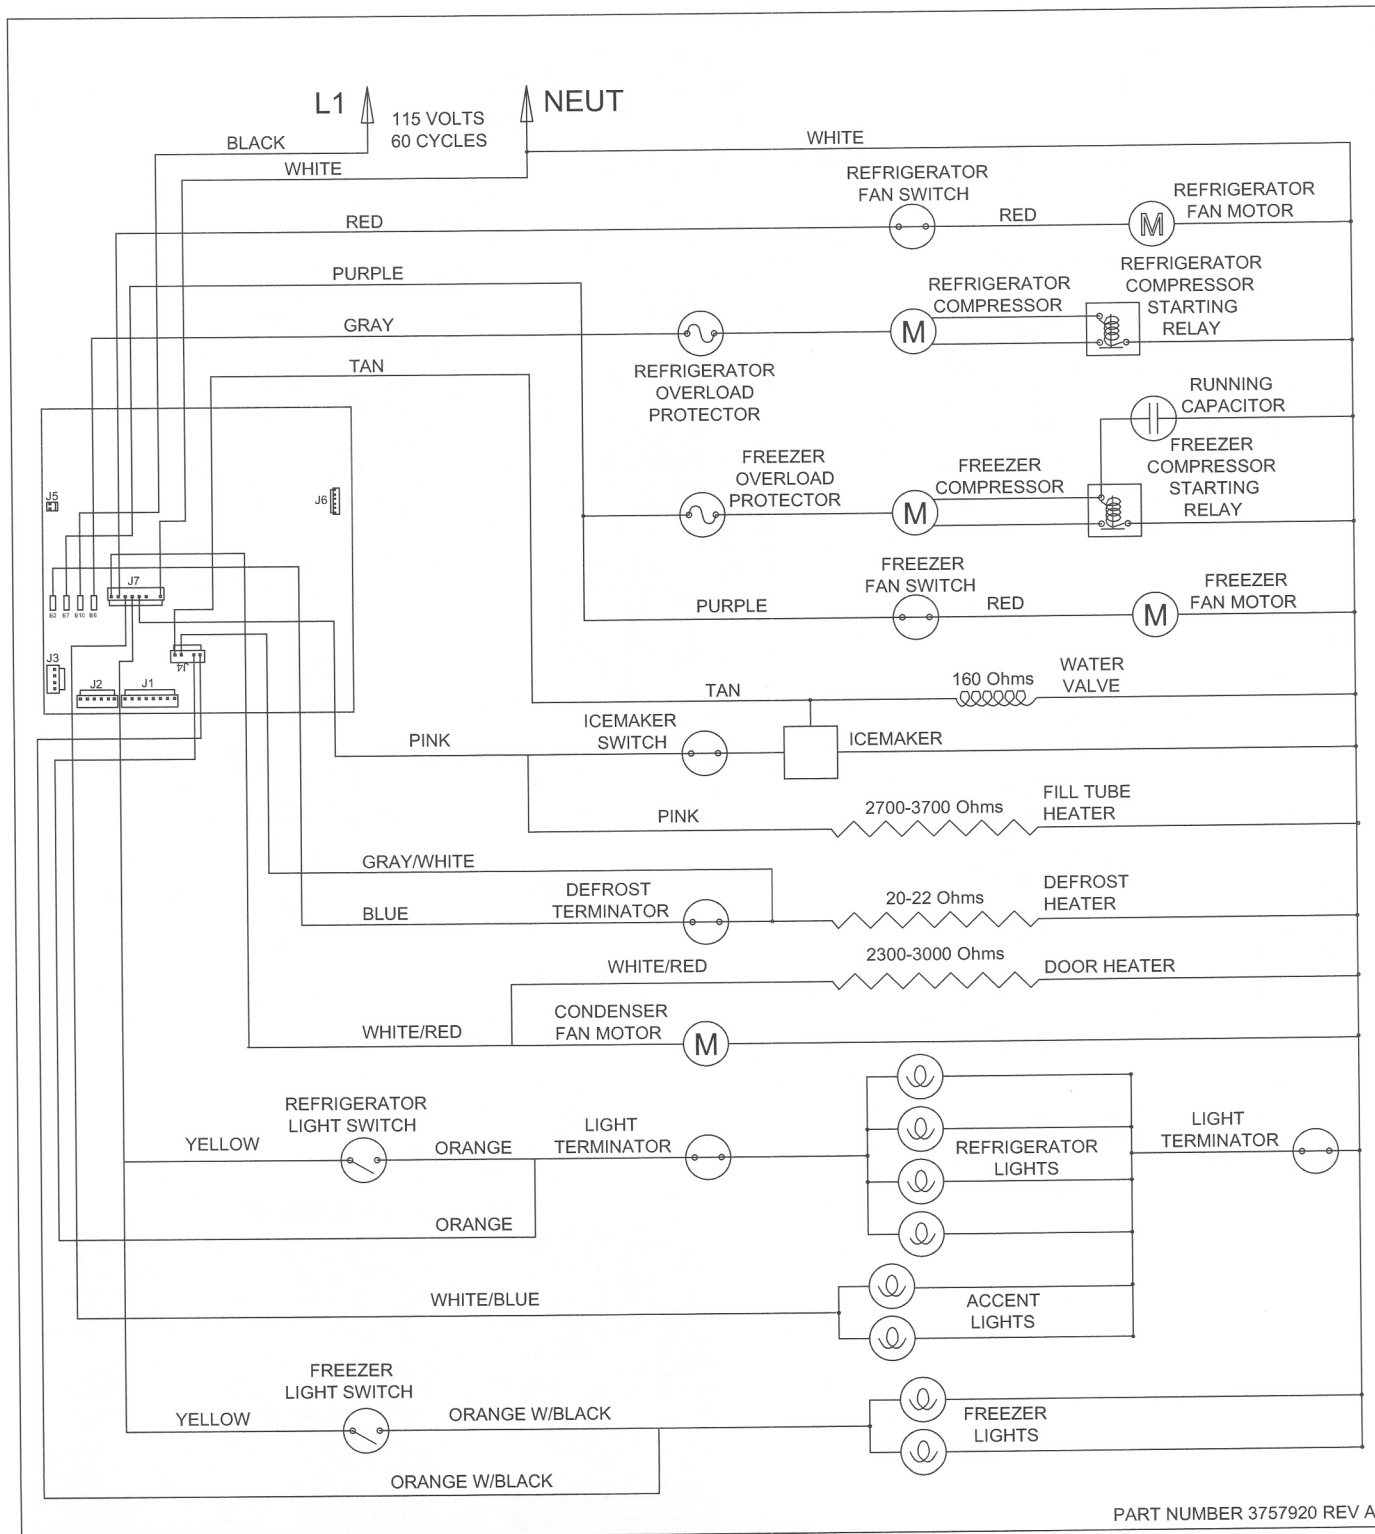


PART NUMBER 3757920 REV A

WIRING DIAGRAM MODELS: 632-2 & 642-2

WARNING

-This wiring information is provided for use by qualified service personnel only.
-Disconnect appliance from electrical supply before beginning service.
-Be sure all grounding devices are connected when service is complete.
-Failure to observe the above warnings may result in severe electrical shock.

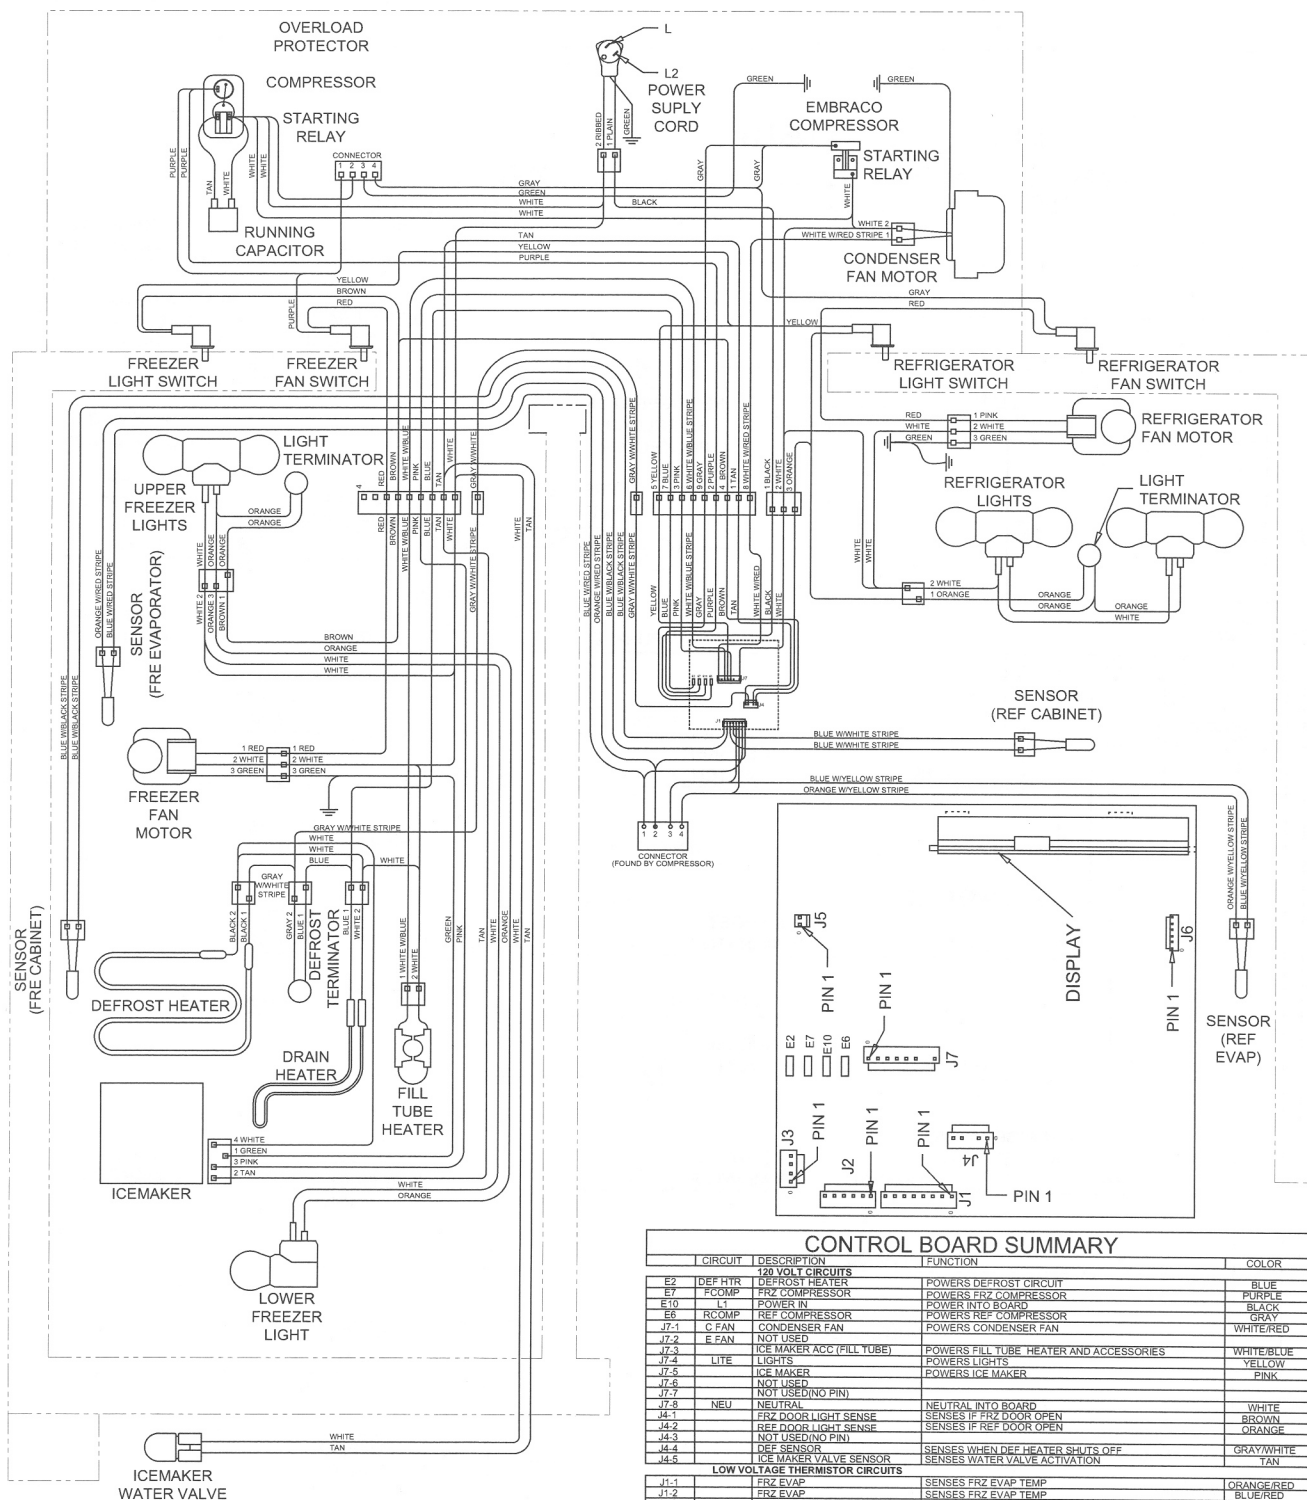


PART NUMBER 3758711

WIRING SCHEMATIC MODELS: 632-2 & 642-2

WARNING


-This wiring information is provided for use by qualified service personnel only.
-Disconnect appliance from electrical supply before beginning service.
-Be sure all grounding devices are connected when service is complete.
-Failure to observe the above warnings may result in severe electrical shock.

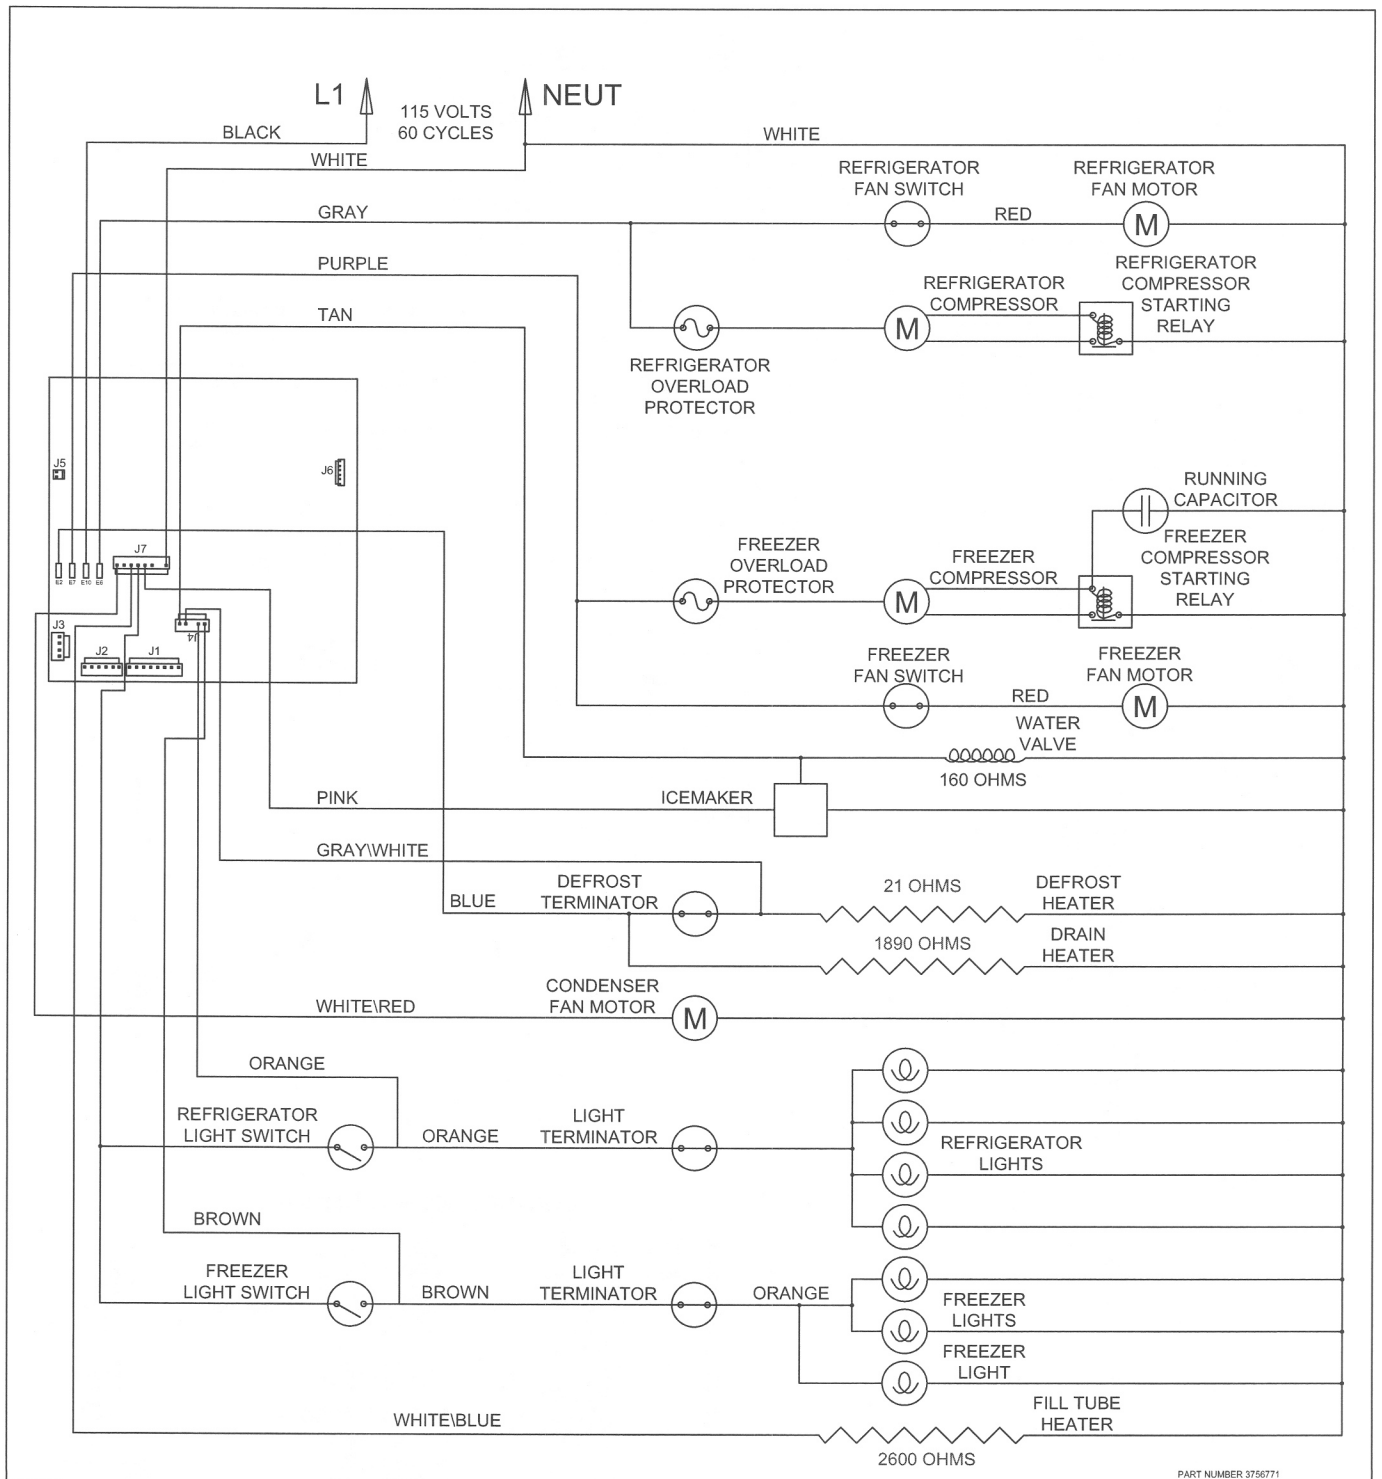

WIRING DIAGRAM MODEL: 661-2

WARNING


-This wiring information is provided for use by qualified service personnel only.
-Disconnect appliance from electrical supply before beginning service.
-Be sure all grounding devices are connected when service is complete.
-Failure to observe the above warnings may result in severe electrical shock.

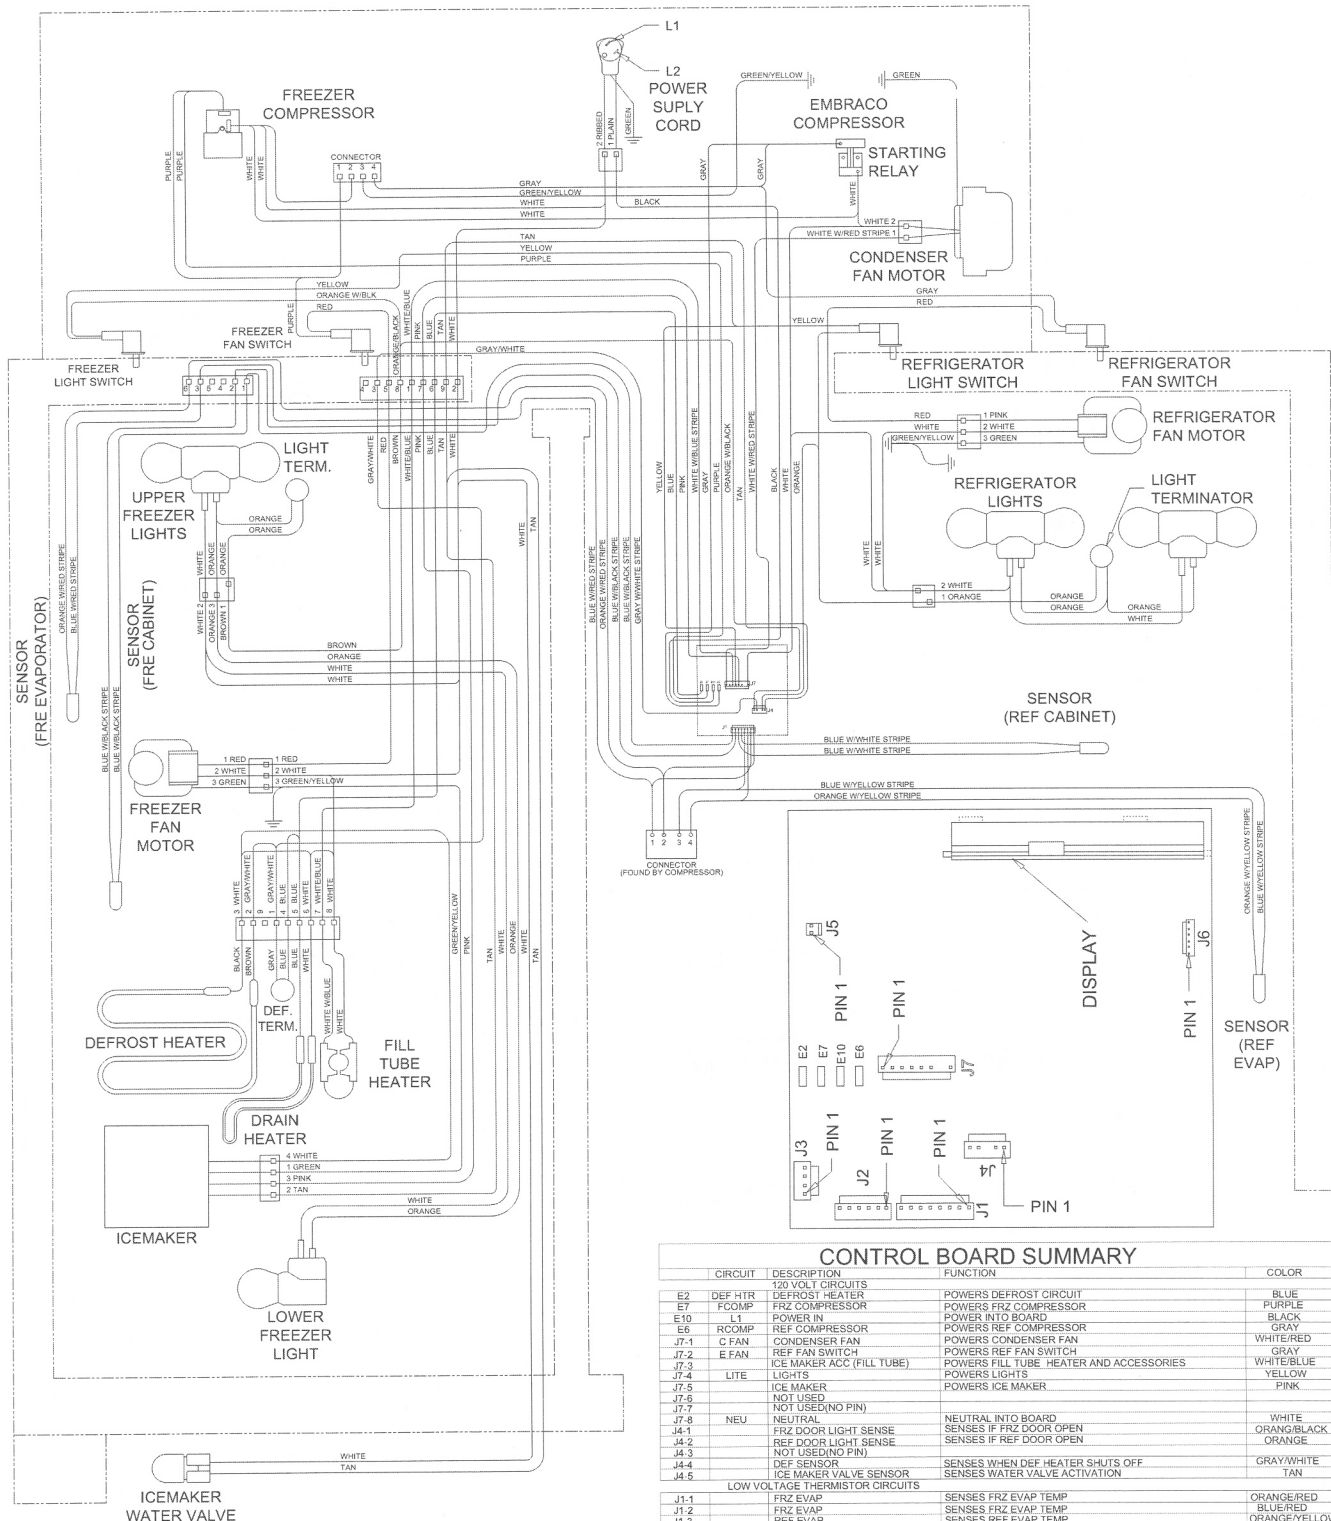

WIRING SCHEMATIC MODEL: 661-2

WARNING

-This wiring information is provided for use by qualified service personnel only.
-Disconnect appliance from electrical supply before beginning service.
-Be sure all grounding devices are connected when service is complete.
-Failure to observe the above warnings may result in severe electrical shock.

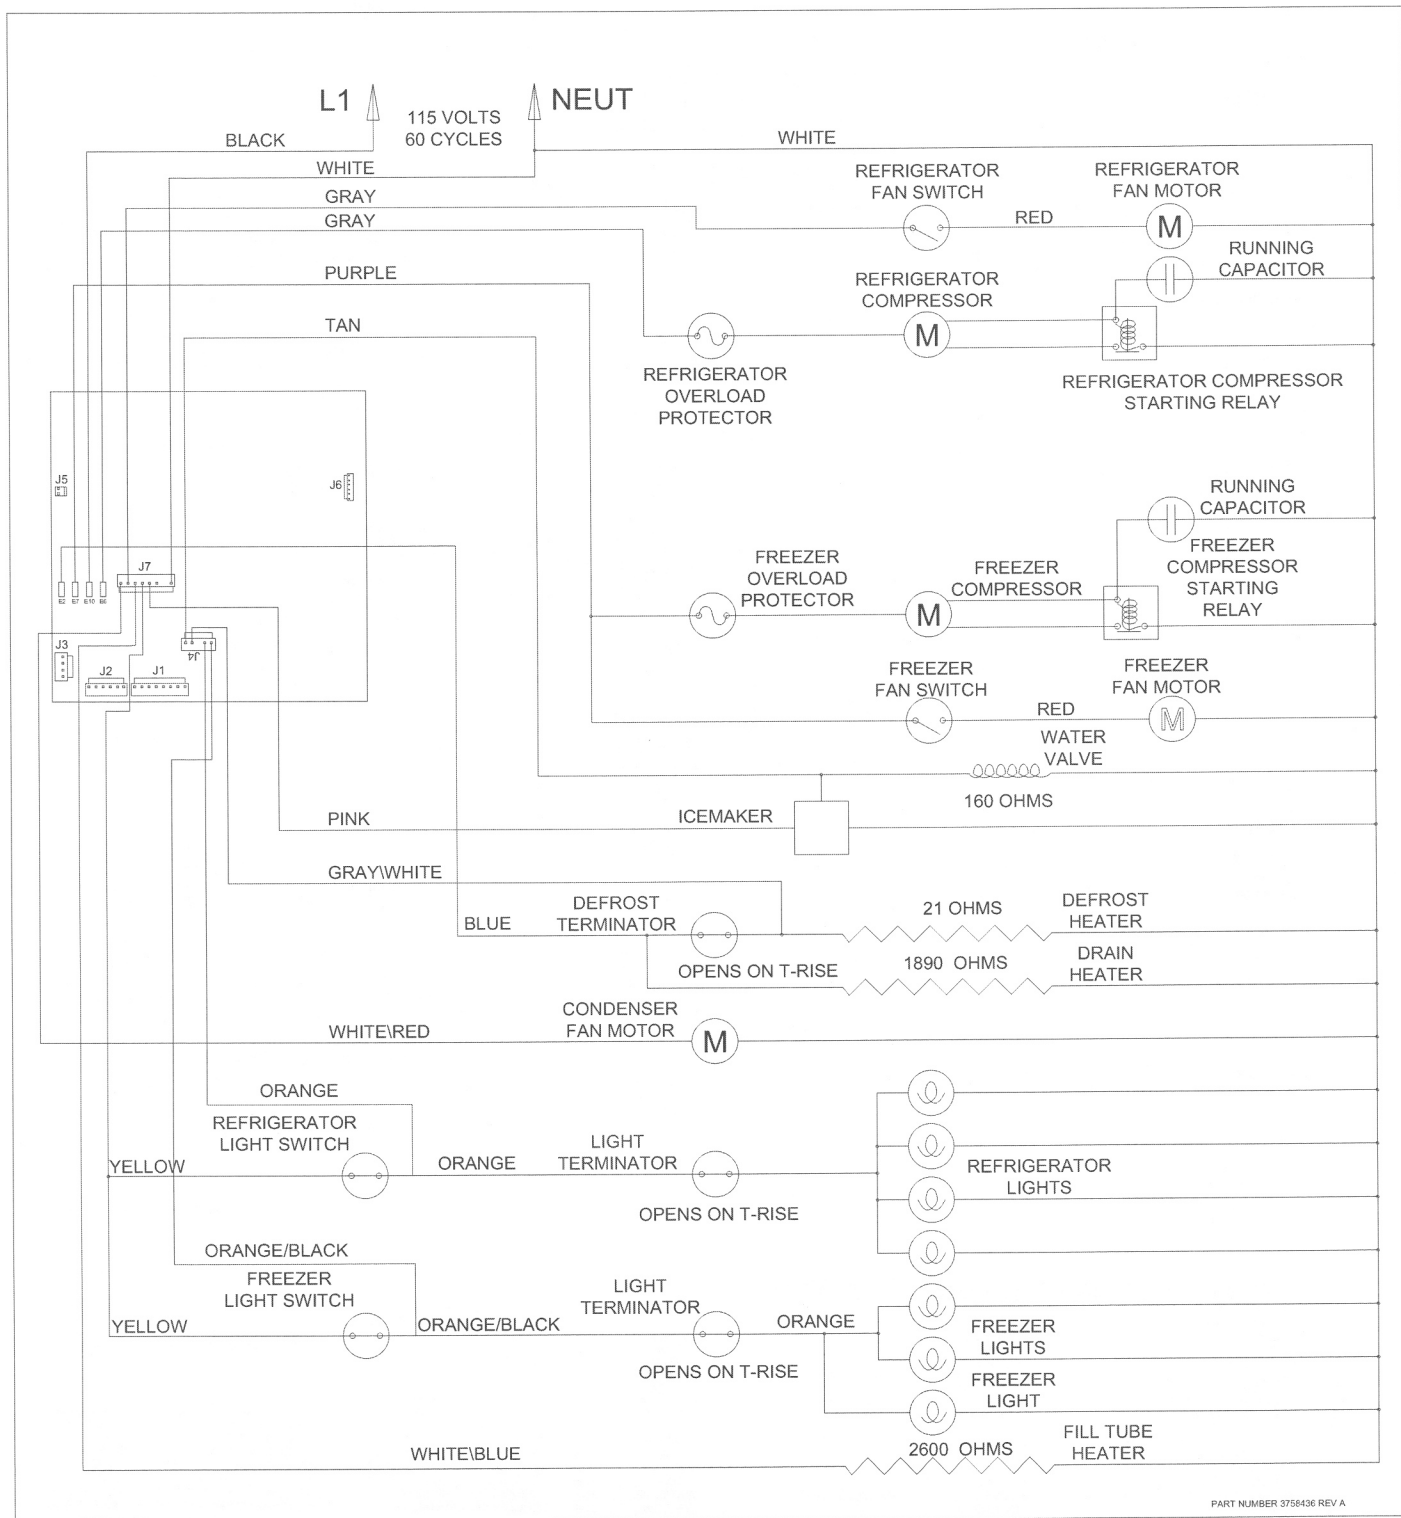


PART NUMBER 3758436 REV A

WIRING DIAGRAM

**MODELS: 685-2 (Prior to Serial #2271174)
695-2 (Prior to Serial #2269189)**

WARNING

-This wiring information is provided for use by qualified service personnel only.
-Disconnect appliance from electrical supply before beginning service.
-Be sure all grounding devices are connected when service is complete.
-Failure to observe the above warnings may result in severe electrical shock.

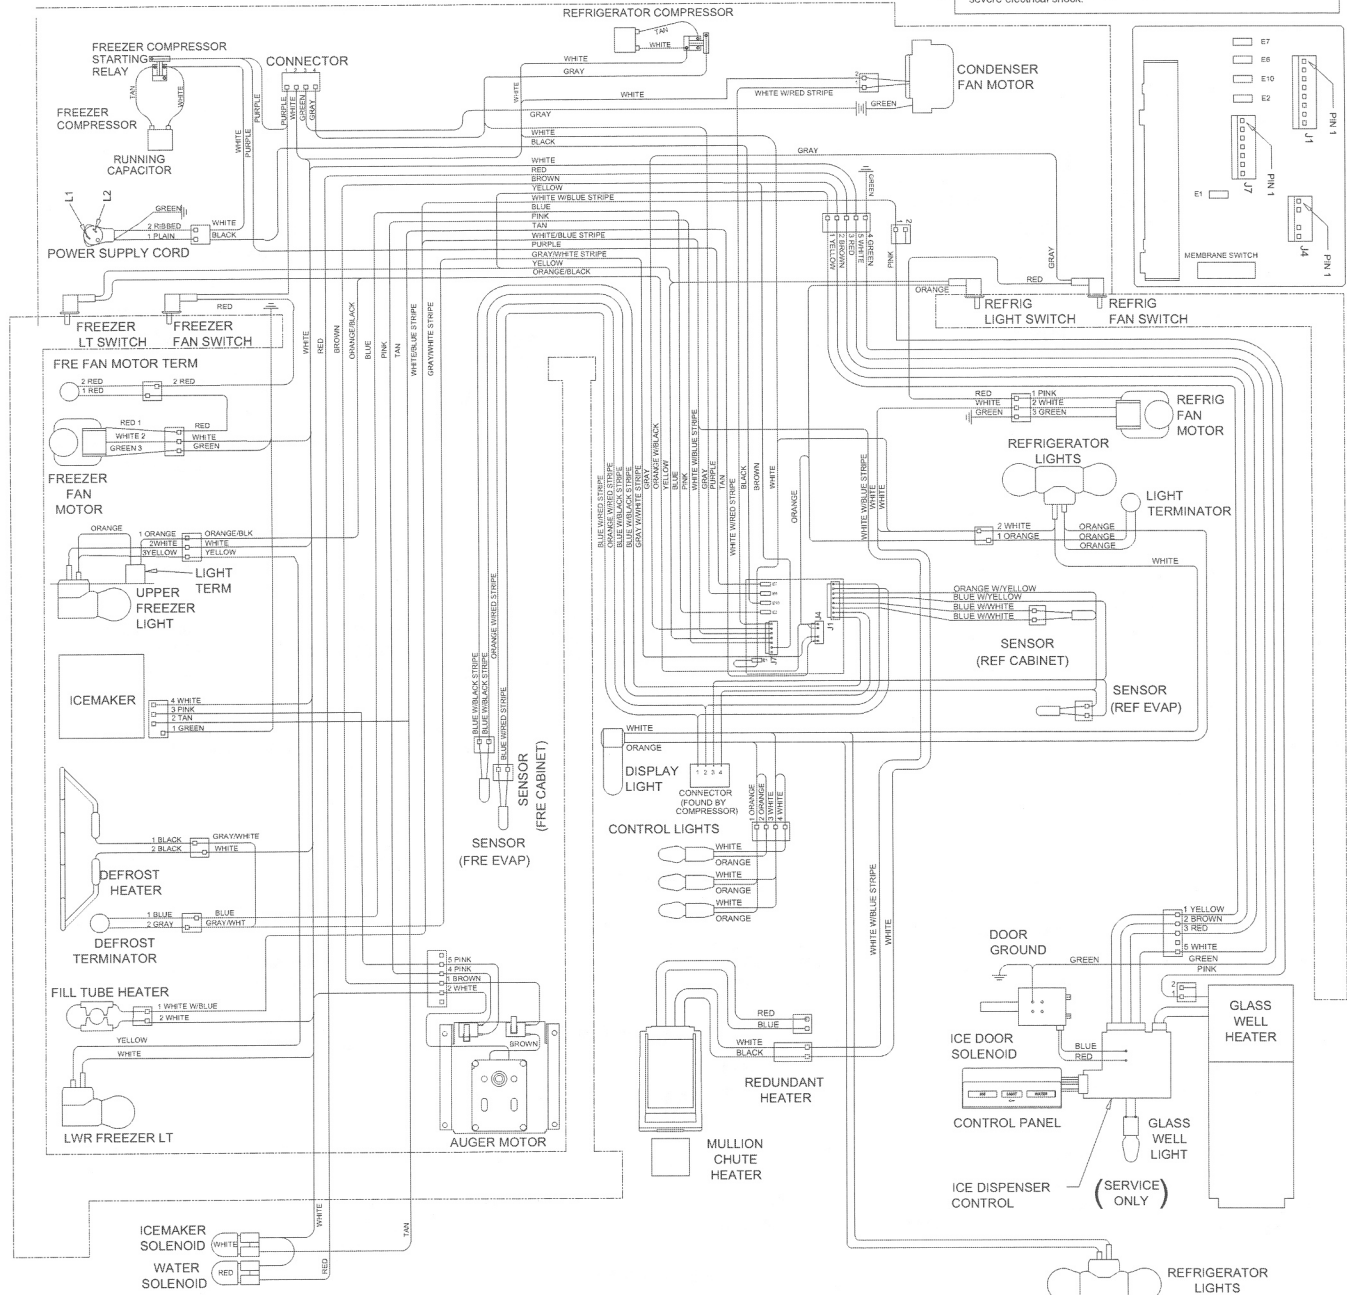

CONTROL BOARD SUMMARY/ LAYOUT

CIRCUIT	DESCRIPTION	FUNCTION	COLOR	CIRCUIT	DESCRIPTION	FUNCTION	COLOR
E	120 VOLT CIRCUITS	NEUTRAL INTO BOARD	WHITE	J7-5	ICE MAKER	POWERS ICE MAKER	PINK
E2	DEFROST HEATER	POWERS DEFROST CIRCUIT	BLUE	J7-6	BULK ICE	POWERS AUGER MOTOR	BROWN
E6	REFRIGERATOR COMPRESSOR	POWERS REFRIG. COMPRESSOR	GRAY	J7-7	NOT USED		
E7	FREEZER COMPRESSOR	POWERS FREEZER COMPRESSOR	PURPLE				
E10	POWER IN	POWER INTO BOARD	BLACK				
J4-1	FREEZER LIGHT SENSOR	SENSES IF FREEZER DOOR OPEN	ORANGE/BLK	J1-1	THERMISTOR CIRCUITS		
J4-2	REF LIGHT SENSOR	SENSES IF REF DOOR OPEN	ORANGE	J1-2	FREEZER EVAPORATOR	SENSES FRE EVAP TEMP	ORANGE/RED
J4-3	NOT USED (NO PIN)			J1-3	FREEZER EVAPORATOR	SENSES FRE EVAP TEMP	BLUE/RED
J4-4	DEFROST SENSE-TERMINATOR	SENSES WHEN HEATER SHUTS OFF	GRAY/WHIT	J1-4	REFRIGERATOR EVAPORATOR	SENSES REF EVAP TEMP	ORANGE/YELLOW
J5-6	ICE MAKER VALVE	SENSES WATER VALVE ACTIVATION	TAN	J1-5	REFRIGERATOR EVAPORATOR	SENSES REF EVAP TEMP	BLUE/YELLOW
J7-1	CONDENSER	POWERS CONDENSER FAN	WHIT/RED	J1-6	REFRIGERATOR COMPARTMENT	SENSES REF COMPARTMENT TEMP	BLUE/WHITE
J7-2	REFRIG FAN SWITCH	POWERS REF FAN SW	GRAY	J1-7	FREEZER COMPARTMENT	SENSES FREZ COMPARTMENT TEMP	BLUE/BLACK
J7-3	ICE MAKER ACCESSORIES (FILL TUBE)	POWERS FILL TUBE AND ACCESSORIES	WHIT/BLUE	J1-8	FREEZER COMPARTMENT	SENSES FREZ COMPARTMENT TEMP	BLUE/BLACK
J7-4	LIGHTS	POWERS LIGHTS	YELLOW				


PART NUMBER 3758468 REV. A

WIRING SCHEMATIC

MODELS: 685-2 (Prior to Serial #2271174)
695-2 (Prior to Serial #2269189)

WARNING

-This wiring information is provided for use by qualified service personnel only.
-Disconnect appliance from electrical supply before beginning service.
-Be sure all grounding devices are connected when service is complete.
-Failure to observe the above warnings may result in severe electrical shock.

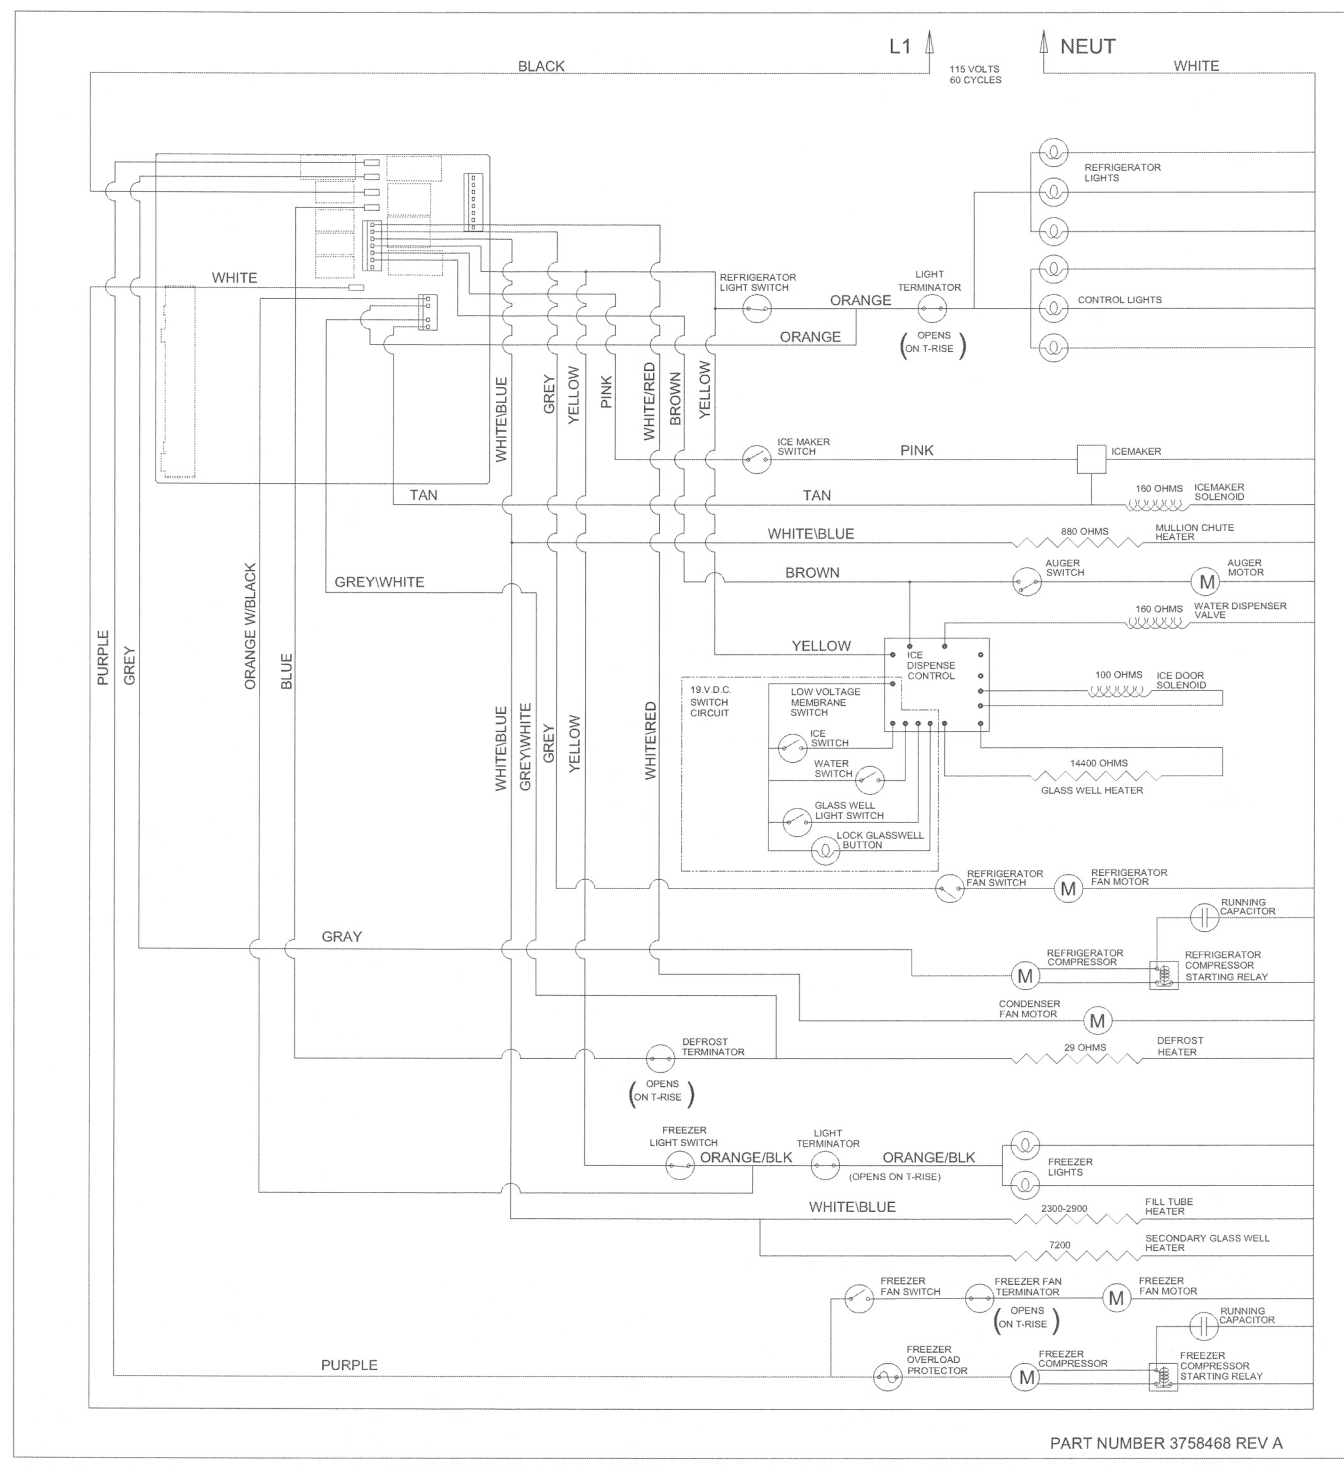


PART NUMBER 3758468 REV A

WIRING DIAGRAM

MODELS: 685-2 (Starting w/Serial #2271174)
695-2 (Starting w/Serial #2269189)

WARNING

- This wiring information is provided for use by qualified service personnel only.
- Disconnect appliance from electrical supply before beginning service.
- Be sure all grounding devices are connected when service is complete.
- Failure to observe the above warnings may result in severe electrical shock.

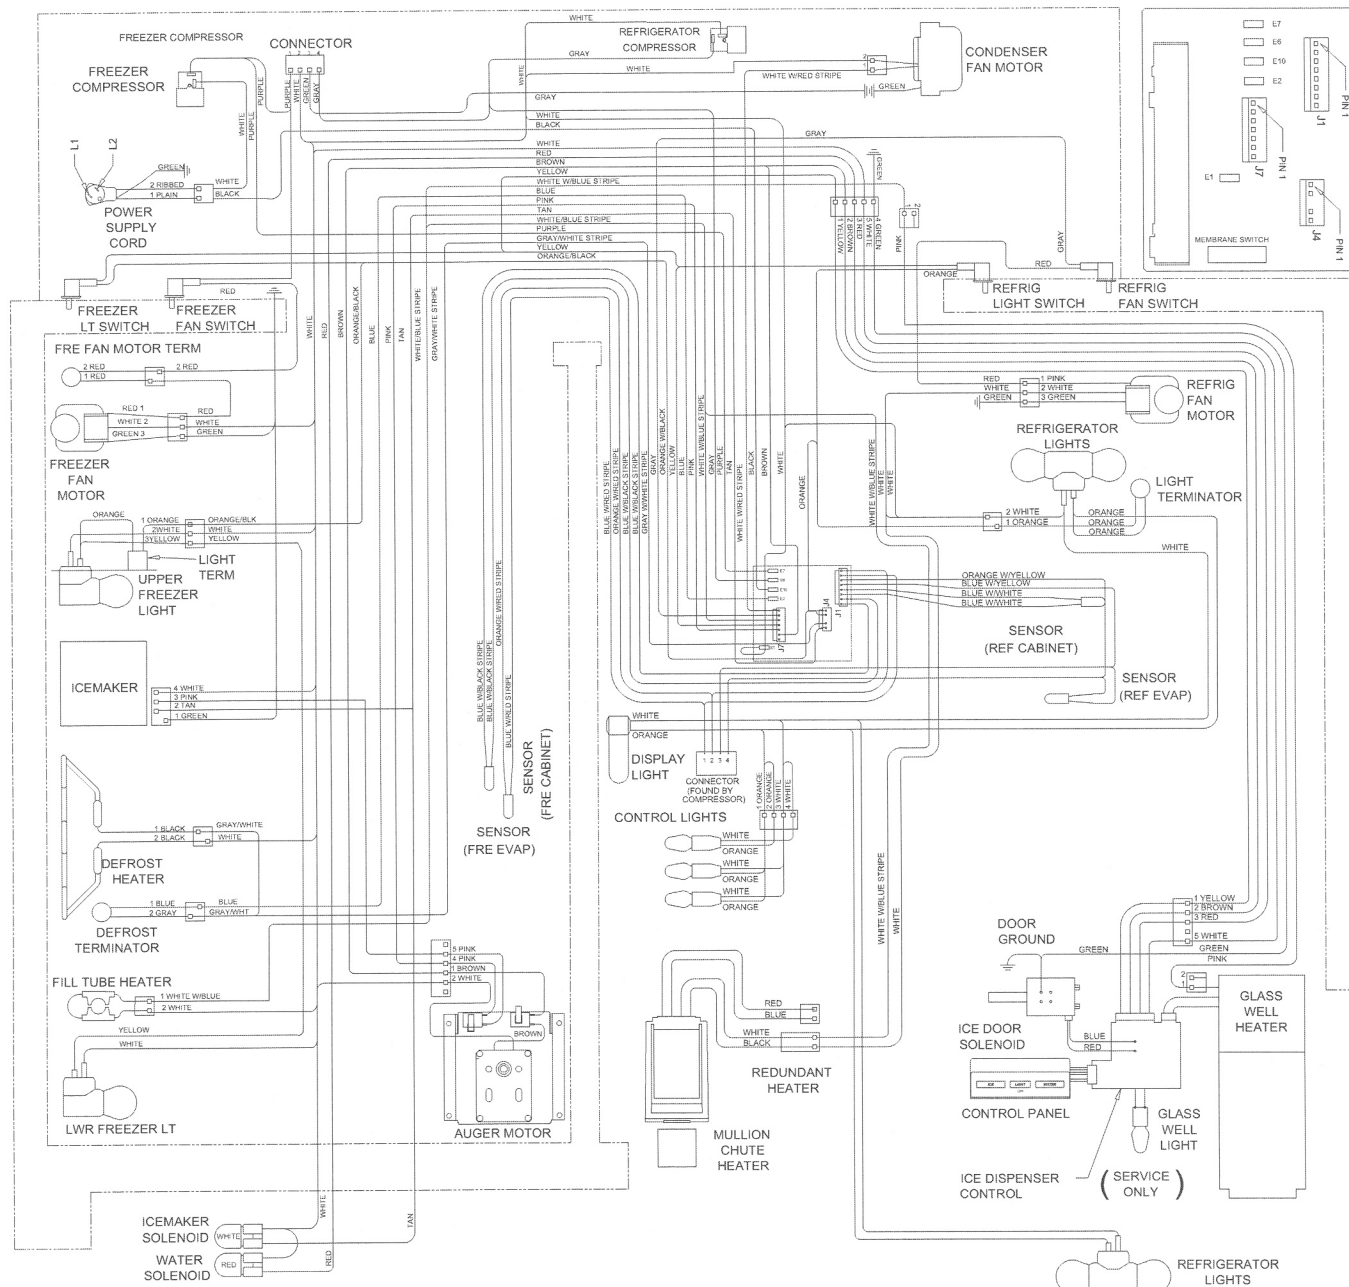

WIRING SCHEMATIC

MODELS: 685-2 (Starting w/Serial #2271174)
695-2 (Starting w/Serial #2269189)

⚠ WARNING

-This wiring information is provided for use by qualified service personnel only.
-Disconnect appliance from electrical supply before beginning service.
-Be sure all grounding devices are connected when service is complete.
-Failure to observe the above warnings may result in severe electrical shock.

